



TB-538: Installation of Model 30MT

The 30MT has a cup-and-cone centering feature used during installation. As the Magnet/Holder (cone feature) is pushed into the bottom of the encoder (cup feature), the encoder aligns to the axis of the Magnet/Holder.

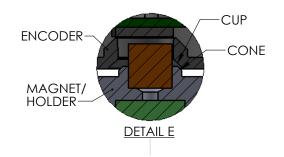

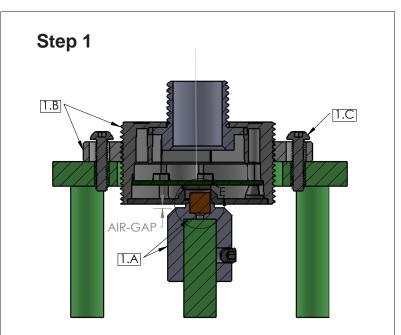


- 1.A Slide Magnet/Holder onto shaft until it bottoms out on the shaft. (Do not tighten set screw.)
- 1.B Adjust TCAP position on Encoder's threads so that the Air-Gap is roughly .010 to .100". (Exact position to be determined later.)
- 1.C Loosely install the mounting screws.

Page 1/2 TB-538 Rev. A, 01/2017




TB-538: Installation of Model 30MT

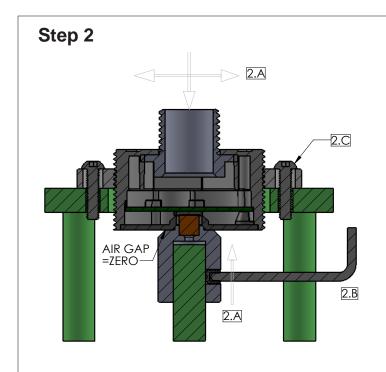

NOTE Perform the following steps while maintaining finger pressure to the top of the encoder.

- 2.A Move Encoder back and forth while simultaneously sliding Magnet/Holder axiallly (with the hex wrench engaged in the set-screw) until the encoder is centered and has zero Air-Gap.
- 2.B Tighten the Set Screw.
- 2.C Tighten Mounting Screws.



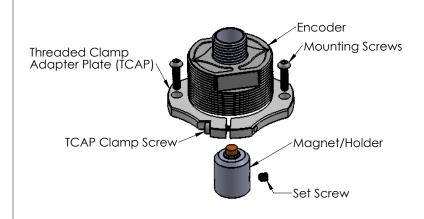

- 3.A Rotate the encoder counterclock-wise approximately 1/2 turn to set the operating Air-Gap.
- 3.B Tighten TCAP Clamp Screw.

