	SimplTrack/HuddleView HTTP-CGI Command	ls		
Control				MID 2021-01-13
Function	Command	Variable	Values	Comments
Pan & Tilt	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&[action]&[pan speed]&[tilt speed]	[camera ip]	*cameras current IP	
		[action]	UP	moves camera 'up'
			DOWN	moves camera 'down'
			LEFT	moves camera 'left'
			RIGHT	moves camera 'right'
			LEFTUP	moves camera 'left' & 'up'
			RIGHTUP	moves camera 'right' & 'up'
			LEFTDOWN	moves camera 'left' & 'down'
			RIGHTDOWN	moves camera 'right' & 'down'
			PTZSTOP	tells camera to 'stop' moving
		[pan speed]	1	slowest 'pan' speed
				ranges from 1 - 24
			24	fastest 'pan' speed
		[tilt speed]	1	slowest 'tilt' speed
				ranges from 1 - 20
			20	fastest 'tilt' speed
Zoom	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&[action]&[zoom speed]	[camera ip]	*cameras current IP	·
		[action]	ZOOMIN	zooms camera in
		Lucuoni	ZOOMOUT	zooms camera out
			ZOOMSTOP	stops zooming
		[zoom oncod]		
		[zoom speed]	1	slowest 'zoom' speed
			 7	ranges from 1 - 7
	http://facurace.in1.0000/aci-kia/aba/dd-ad0-b-ad0-f-ad	Fa	7	fastest 'zoom' speed
Focus	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&[action]&[focus speed]	[camera ip]	*cameras current IP	
		[action]	FOCUSIN	focuses camera in
			FOCUSOUT	focuses camera out
			FOCUSSTOP	stops focusing
		[focus speed]	1	slowest 'focus' speed
				ranges from 1 - 7
			7	fastest 'focus' speed
Home Position	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&home	[camera ip]	*cameras current IP	Moves camera to HOME
PT Reset	http://[camera ip]:8080/cgi-bin/param.cgi?pan_tiltdrive_reset	[camera ip]	*cameras current IP	Performs pan / tilt reset "dance
Preset	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&[action]&[position number]	[camera ip]	*cameras current IP	
		[action]	POSSET	position 'set'
		[action]	POSCALL	position 'call'
		[position number]	0	beginning of range 1
		[position number]		
				range 1 from 0-89
			89	end of range 1
			100	beginning of range 2
				range 2 from 100-254
			254	end of range 2
ect Position Recall	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&[mode]&[pan speed]&[tilt speed]&[pan position]&[tilt position]	[camera ip]	*cameras current IP	
		[mode]	ABS	Absolute Positioning
			REL	Relative Positioning
		[pan speed]	1	slowest 'pan' speed
				ranges from 1 - 24
			24	fastest 'pan' speed
		[tilt speed]	24 1	fastest 'pan' speed slowest 'tilt' speed
		[tilt speed]		
		[tilt speed]	1	slowest 'tilt' speed
			1 	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed
		[tilt speed]	1 20 0000 or FFFF	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position
			1 20 0000 or FFFF 0001	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right
			1 20 0000 or FFFF 0001 	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX
			1 20 0000 or FFFF 0001 0990	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan right
			1 20 0000 or FFFF 0001 0990 FFFE	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan right first step pan left
			1 20 0000 or FFFF 0001 0990 FFFE	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan right first step pan left range from FFFF to F670 (HEX
		[pan position]	1 20 0000 or FFFF 0001 0990 FFFE F670	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan right first step pan left range from FFFF to F670 (HEX) last step pan left
			1 20 0000 or FFFF 0001 0990 FFFE F670 0000 or FFFF	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan right first step pan left range from FFFF to F670 (HEX last step pan left Home Position
		[pan position]	1 20 0000 or FFFF 0001 0990 FFFE F670 0000 or FFFF 0001	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan right first step pan left range from FFFF to F670 (HEX last step pan left Home Position first step tilt up
		[pan position]	1 20 0000 or FFFF 0001 F670 0000 or FFFF 0001	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan right first step pan left range from FFFF to F670 (HEX last step pan left Home Position first step tilt up range from 0000 to 0510 (HEX
		[pan position]	1 20 0000 or FFFF 0001 F670 0000 or FFFF 0001 0510	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first steep pan right range from 0000 to 0990 (HEX last steep pan right first steep pan left range from FFFF to F670 (HEX last steep pan left Home Position first steet tilt up range from 0000 to 0510 (HEX last steep tilt up
		[pan position]	1 20 0000 or FFFF 0001 F670 0000 or FFFF 0001 0510 FFFE	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan right first step pan left range from FFFF to F670 (HEX last step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up first step tilt up first step tilt up first step tilt down
		[pan position]	1 20 0000 or FFFF 0001 990 FFFE F670 0000 or FFFF 0001 0510 FFFE	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan left first step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up range from FFFF to F651 (HEX last step tilt up first step tilt up first step tilt up first step tilt down range from FFFF to F651 (HEX)
		[pan position]	1 20 0000 or FFFF 0001 F670 0000 or FFFF 0001 0510 FFFE	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan right first step pan left range from FFFF to F670 (HEX last step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up first step tilt up first step tilt up first step tilt down
		[pan position]	1 20 0000 or FFFF 0001 990 FFFE F670 0000 or FFFF 0001 0510 FFFE	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan left first step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up range from 5000 to 0510 (HEX last step tilt up first step tilt up first step tilt up first step tilt down range from FFFF to FE51 (HEX)
		[pan position]	1 20 0000 or FFFF 0001 990 FFFE F670 0000 or FFFF 0001 0510 FFFE	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan left first step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up range from FFFF to F651 (HEX last step tilt up first step tilt up first step tilt up first step tilt down range from FFFF to F651 (HEX)
rect Zoom Recall	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&zoomto&[zoom speed]&[zoom position]	[pan position]	1 20 0000 or FFFF 0001 990 FFFE F670 0000 or FFFF 0001 0510 FFFE	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan left first step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up range from FFFF to F651 (HEX last step tilt up first step tilt up first step tilt up first step tilt down range from FFFF to F651 (HEX)
rect Zoom Recall	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&zoomto&[zoom speed]&[zoom position]	[pan position]	1 20 0000 or FFFF 0001 0990 FFFE F670 0000 or FFFF 0001 0510 FFFE FFEE	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan left first step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up range from FFFF to F651 (HEX last step tilt up first step tilt up first step tilt up first step tilt down range from FFFF to F651 (HEX)
rect Zoom Recall	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&zoomto&[zoom speed]&[zoom position]	[pan position] [tilt position]	1 20 0000 or FFFF 0001 9990 FFFE F670 0000 or FFFF 0001 0510 FFFE FE51	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan left range from FFFF to F670 (HEX last step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up first step tilt down range from FFFF to FE51 (HEX last step tilt down range from FFFF to FE51 (HEX last step tilt down
rect Zoom Recall	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&zoomto&[zoom speed]&[zoom position]	[pan position] [tilt position]	1 20 0000 or FFFF 0001 9990 FFFE F670 0000 or FFFF 0001 0510 FFFE FE51	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan right first step pan left range from FFFF to F670 (HEX last step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up first step tilt down range from FFFF to FE51 (HEX last step tilt down range from FFFF to FE51 (HEX last step tilt down
rect Zoom Recall	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&zoomto&[zoom speed]&[zoom position]	[pan position] [tilt position] [camera ip] [zoom speed]	1 20 0000 or FFFF 0001 9990 FFFE F670 0000 or FFFF 0001 0510 FFFE FE51 *cameras current IP 0 7	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan right first step pan left range from FFFF to F670 (HEX last step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up first step tilt down range from FFFF to FE51 (HEX last step tilt down slowest zoom speed range from 0 - 7 fastest zoom speed
rect Zoom Recall	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&zoomto&[zoom speed]&[zoom position]	[pan position] [tilt position]	1 20 0000 or FFFF 0001 9990 FFFE F670 0000 or FFFF 0001 9510 FFFE FE51 *cameras current IP 0 7 0000	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first steep pan right range from 0000 to 0990 (HEX last step pan right first step pan left range from FFFF to F670 (HEX last step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up first step tilt up sit step tilt up first step tilt down range from FFFF to FE51 (HEX last step tilt down slowest zoom speed range from 0 - 7 fastest zoom speed Full Wide
rect Zoom Recall	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&zoomto&[zoom speed]&[zoom position]	[pan position] [tilt position] [camera ip] [zoom speed]	1 20 0000 or FFFF 0001 0990 FFFE F670 0000 or FFFF 0001 0510 FFFE FE51 *cameras current IP 0 7 0000	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan right first step pan left range from FFFF to F670 (HEX last step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up first step tilt down range from FFFF to FE51 (HEX last step tilt down slowest zoom speed range from 0 - 7 fastest zoom speed Full Wide range from 0 - 4000 (HEX)
rect Zoom Recall	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&zoomto&[zoom speed]&[zoom position]	[pan position] [tilt position] [camera ip] [zoom speed]	1 20 0000 or FFFF 0001 9990 FFFE F670 0000 or FFFF 0001 9510 FFFE FE51 *cameras current IP 0 7 0000	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first steep pan right range from 0000 to 0990 (HEX last step pan right first step pan left range from FFFF to F670 (HEX last step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up first step tilt up sit step tilt up first step tilt down range from FFFF to FE51 (HEX last step tilt down slowest zoom speed range from 0 - 7 fastest zoom speed Full Wide
	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&zoomto&[zoom speed]&[zoom position]	[pan position] [tilt position] [camera ip] [zoom speed]	1 20 0000 or FFFF 0001 0990 FFFE F670 0000 or FFFF 0001 0510 FFFE FE51 *cameras current IP 0 7 0000	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan right first step pan left range from FFFF to F670 (HEX last step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up first step tilt down range from FFFF to FE51 (HEX last step tilt down slowest zoom speed range from 0 - 7 fastest zoom speed Full Wide range from 0 - 4000 (HEX)
rect Zoom Recall		[pan position] [tilt position] [camera ip] [zoom speed] [zoom position]	1 20 0000 or FFFF 0001 0990 FFFE F670 0000 or FFFF 0001 0510 FFFE FE51 *cameras current IP 0 7 0000 4000	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan left first step pan left range from FFFF to F670 (HEX last step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up first step tilt down range from FFFF to FE51 (HEX last step tilt down salest step tilt down self from FFFF to FE51 (HEX last step tilt down range from 5 or 7 fastest zoom speed range from 0 - 7 fastest zoom speed Full Wide range from 0 - 4000 (HEX)
	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&zoomto&[zoom speed]&[zoom position] Command http://[camera ip]:8080/cgi-bin/param.cgi?navigate_mode&[mode]	[pan position] [tilt position] [camera ip] [zoom speed]	1 20 0000 or FFFF 0001 0990 FFFE F670 0000 or FFFF 0001 0510 FFFE FE51 *cameras current IP 0 7 0000	slowest 'tilt' speed ranges from 1 - 20 fastest 'tilt' speed home position first step pan right range from 0000 to 0990 (HEX last step pan right first step pan left range from FFFF to F670 (HEX last step pan left Home Position first step tilt up range from 0000 to 0510 (HEX last step tilt up first step tilt down range from FFFF to FE51 (HEX last step tilt down slowest zoom speed range from 0 - 7 fastest zoom speed Full Wide range from 0 - 4000 (HEX)

			PTZ	P/T/Z Control Mode
OSD Menu Navigation	http://[camera ip]:8080/cgi-bin/ptzctrl.cgi?ptzcmd&[action]	[camera ip]	*cameras current IP	
			UP	moves menu selection 'up'
			DOWN	moves menu selection 'down'
			LEFT	Adjusts OSD option left
			RIGHT	Adjusts OSD option right
	http://[camera ip]:8080/cgi-bin/param.cgi?navigate_mode&[mode]	[camera ip]	*cameras current IP	
		[mode]	CONFIRM	Selects an OSD option
			OSD_BACK	Returns to previous menu
Image Adjustments				
Function	Command	Variable	Values	Comments
Image Settings	http://[camera ip]:8080/cgi-bin/param.cgi?post_image_value&[mode]&[level]	[camera ip]	*cameras current IP	
		[mode]	BRIGHT	adjust brightness
			SATURATION	adjust saturation
			CONTRAST	adjust contrast
			SHARPNESS	adjust sharpness
			HUE	adjust hue
		[level]	0	beginning of range
				ranges from 0 -14
			14	end of range
Image Orientation	http://[camera ip]:8080/cgi-bin/param.cgi?post_image_value&[mode]&[state]	[camera ip]	*cameras current IP	
		[mode]	FLIP	flipped image adjustments
			MIRROR	mirrored image adjustments
		[state]	1	flip / mirror
			0	default
Default Image Settings	http://[camera ip]:8080/cgi-bin/param.cgi?get_image_default_conf	[camera ip]	*cameras current IP	Defaults all image settings above
JPEG Snapshot Function	Command	Variable	Values	Comments
Take Snapshot	http://[camera ip]:8080/snapshot.jpg	[camera ip]		Takes a JPEG snapshot
Change Resolution	http://[camera ip]:8080/cgi-bin/snapshot.cgi?post_snapshot_conf&resolution=[size]	[camera ip]	*cameras current IP	0.4. IDEO
		[size]	1920x1080	Sets JPEG resolution to 1920x1080
			960x600	Sets JPEG resolution to 960x600
			480x300	Sets JPEG resolution to 480x300