

TCP control of the SimpliTrack or HuddlView is available on port 5678 by default when using the most up to date firmware

ACK / Completion Messages

Command Messages	Comments
ACK z0 4y FF (y:Socket No.)	Returned when the command is accepted.
Completion z0 5y FF (y:Socket No.)	Returned when the command has been executed.

Error Messages

Command Messages	Comments
Syntax Error z0 60 02 FF	Returned when the command format is different or when a command with illegal command parameters is accepted.
Command Buffer Full z0 60 03 FF	Indicates that two sockets are already being used (executing two commands) and the command could not be accepted when received.
Command Canceled z0 6y 04 FF (y:Socket No.)	Returned when a command which is being executed in a socket specified by the cancel command is canceled. The completion message for the command is not returned.
No Socket z0 6y 05 FF (y:Socket No.)	Returned when no command is executed in a socket specified by the cancel command, or when an invalid socket number is specified.
Command Not Executable z0 6y 41 FF (y:Execution command Socket No. Inquiry command:0)	Returned when a command cannot be executed due to current conditions. For example, when commands controlling the focus manually are received during auto focus.

Commands

Command Set	Command	Command Packet	Comments
AddressSet	Broadcast	88 30 01 FF	Address setting
IF_Clear	Broadcast	88 01 00 01 FF	I/F Clear
CommandCancel		81 2p FF	p: Socket No.(=1or2)
CAM_Power	On	81 01 04 00 02 FF	Power ON/OFF
	Off	81 01 04 00 03 FF	
CAM_Zoom	Stop	81 01 04 07 00 FF	p=0 (Low) to 7 (High)
	Tele(Standard)	81 01 04 07 02 FF	
	Wide(Standard)	81 01 04 07 03 FF	
	Tele(Variable)	81 01 04 07 2p FF	
	Wide(Variable)	81 01 04 07 3p FF	
CAM_Focus	Direct	81 01 04 47 0p 0q 0r 0s FF	pqrs: Zoom Position
	Stop	81 01 04 08 00 FF	p=0 (Low) to 7 (High)
	Far(Standard)	81 01 04 08 02 FF	
	Near(Standard)	81 01 04 08 03 FF	
	Far(Variable)	81 01 04 08 2p FF	
	Near(Variable)	81 01 04 08 3p FF	pqrs: Focus Position
	Direct	81 01 04 48 0p 0q 0r 0s FF	
	Auto Focus	81 01 04 38 02 FF	AF ON/OFF
	Manual Focus	81 01 04 38 03 FF	
	Auto/Manual	81 01 04 38 10 FF	One Push AF Trigger
One Push Trigger	81 01 04 18 01 FF		
CAM_ZoomFocus	Direct	81 01 04 47 0p 0q 0r 0s 0t 0u 0v 0w FF	pqrs: Zoom Position tuvw: Focus Position
CAM_WB	Auto	81 01 04 35 00 FF	Normal Auto
	Indoor	81 01 04 35 01 FF	Indoor mode
	Outdoor	81 01 04 35 02 FF	Outdoor mode
	One Push WB	81 01 04 35 03 FF	One Push WB mode
	Manual	81 01 04 35 05 FF	Manual Control mode
CAM_RGain	One push trigger	81 01 04 10 05 FF	One Push WB Trigger
	Reset	81 01 04 03 00 FF	Manual Control of R Gain
	Up	81 01 04 03 02 FF	
	Down	81 01 04 03 03 FF	
CAM_BGain	Direct	81 01 04 43 00 00 0p 0q FF	pq: R Gain
	Reset	81 01 04 04 00 FF	Manual Control of B Gain
	Up	81 01 04 04 02 FF	
	Down	81 01 04 04 03 FF	
CAM_AE	Direct	81 01 04 44 00 00 0p 0q FF	pq: B Gain
	Full Auto	81 01 04 39 00 FF	Automatic Exposure mode
	Manual	81 01 04 39 03 FF	Manual Control mode
	Shutter Priority	81 01 04 39 0A FF	Shutter Priority Automatic Exposure
	Iris Priority	81 01 04 39 0B FF	Iris Priority Automatic Exposure mode
CAM_Shutter	Bright	81 01 04 39 0D FF	Bright Mode (Manual control)
	Reset	81 01 04 0A 00 FF	Shutter Setting
	Up	81 01 04 0A 02 FF	
	Down	81 01 04 0A 03 FF	
CAM_Iris	Direct	81 01 04 4A 00 00 0p 0q FF	pq: Shutter Position
	Reset	81 01 04 0B 00 FF	Iris Setting
	Up	81 01 04 0B 02 FF	
	Down	81 01 04 0B 03 FF	
CAM_Gain	Direct	81 01 04 4B 00 00 0p 0q FF	pq: Iris Position
	Reset	81 01 04 0C 00 FF	Gain Setting
	Up	81 01 04 0C 02 FF	
	Down	81 01 04 0C 03 FF	
CAM_Bright	Direct	81 01 04 4C 00 00 0p 0q FF	pq: Gain Position
	Reset	81 01 04 0D 00 FF	Bright Setting
	Up	81 01 04 0D 02 FF	
	Down	81 01 04 0D 03 FF	
CAM_Bright	Direct	81 01 04 4D 00 00 0p 0q FF	pq: Bright Position

CAM_ExpComp	On	81 01 04 3E 02 FF	Exposure Compensation ON/OFF
	Off	81 01 04 3E 03 FF	
	Reset	81 01 04 0E 00 FF	Exposure Compensation Amount Setting
	Up	81 01 04 0E 02 FF	
	Down	81 01 04 0E 03 FF	
	Direct	81 01 04 4E 00 00 0p 0q FF	pq: ExpComp Position
CAM_Backlight	On	81 01 04 33 02 FF	Back Light Compensation ON/OFF
	Off	81 01 04 33 03 FF	
CAM_Aperture	Reset	81 01 04 02 00 FF	Aperture Control
	Up	81 01 04 02 02 FF	
	Down	81 01 04 02 03 FF	
		Direct	81 01 04 42 00 00 0p 0q FF
CAM_PictureEffect	Off	81 01 04 63 00 FF	Picture Effect Setting
	Neg.Art	81 01 04 63 02 FF	
	B&W	81 01 04 63 04 FF	
CAM_Memory	Reset	81 01 04 3F 00 pp FF	pp: Memory Number (=0 to 255) Corresponds to 0 to 255 on the Remote Commander.
	Set	81 01 04 3F 01 pp FF	
	Recall	81 01 04 3F 02 pp FF	
SYS_Menu	Off	81 01 06 06 03 FF	Turns off the menu screen.
CAM_IDWrite		81 01 04 22 0p 0q 0r 0s FF	pqrs: Camera ID (=0000 to FFFF)
IR_Receive	On	81 01 06 08 02 FF	IR(remote commander) receive ON/OFF
	Off	81 01 06 08 03 FF	
Information Display	On	81 01 7E 01 18 02 FF	ON/OFF of the Operation status display
	Off	81 01 7E 01 18 03 FF	
Pan-tiltDrive	Up	81 01 06 01 VV WW 03 01 FF	VV: Pan speed 0 x01 (low speed) to 0 x18 (high speed) WW: Tilt Speed 0 x 01 (low speed) to 0 x14 (high speed) YYYY: Pan Position ZZZZ: Tilt Position
	Down	81 01 06 01 VV WW 03 02 FF	
	Left	81 01 06 01 VV WW 01 03 FF	
	Right	81 01 06 01 VV WW 02 03 FF	
	UpLeft	81 01 06 01 VV WW 01 01 FF	
	UpRight	81 01 06 01 VV WW 02 01 FF	
	DownLeft	81 01 06 01 VV WW 01 02 FF	
	DownRight	81 01 06 01 VV WW 02 02 FF	
	Stop	81 01 06 01 VV WW 03 03 FF	
	AbsolutePosition	81 01 06 02 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	RelativePosition	81 01 06 03 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
Home	81 01 06 04 FF		
Reset	81 01 06 05 FF		
Pan-tiltLimitSet	LimitSet	81 01 06 07 00 0W 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	W: 1 UpRight 0: DownLeft YYYY: Pan Limit Position ZZZZ: Tilt Position
CAM_TrackingON	Enable Tracking / Framing	81 01 04 3F 02 50 FF	
CAM_TrackingOFF	Disable Tracking / Framing	81 01 04 3F 02 51 FF	
CAM_AutoFrameTrigger	One Push Auto Frame	81 01 0E 24 6C 0p 0p FF	P P: seconds (i.e. to enable framing / tracking for 21 seconds would be 0p 0p = 02 01)
CAM_DynBlockZones	On	81 0B 0D 00 0p 01 FF	p: blocking zone (1 - 8)
	Off	81 0B 0D 00 0p 02 FF	

Inquiry Commands

Command Set	Command	Inquiry Packet	Comments
CAM_PowerInq	81 09 04 00 FF	y0 50 02 FF	On
		y0 50 03 FF	Off (Standby)
		y0 50 04 FF	Internal power circuit error
CAM_ZoomPosInq	81 09 04 47 FF	y0 50 0p 0q 0r 0s FF	pqrs: Zoom Position
CAM_FocusModelInq	81 09 04 38 FF	y0 50 02 FF	Auto Focus
		y0 50 03 FF	Manual Focus
CAM_FocusPosInq	81 09 04 48 FF	y0 50 0p 0q 0r 0s FF	pqrs: Focus Position
CAM_WBModelInq	81 09 04 35 FF	y0 50 00 FF	Auto
		y0 50 01 FF	In Door
		y0 50 02 FF	Out Door
		y0 50 03 FF	One Push WB
		y0 50 05 FF	Manual
CAM_RGainInq	81 09 04 43 FF	y0 50 00 00 0p 0q FF	pq: R Gain
CAM_BGainInq	81 09 04 44 FF	y0 50 00 00 0p 0q FF	pq: B Gain
CAM_AEModelInq	81 09 04 39 FF	y0 50 00 FF	Full Auto
		y0 50 03 FF	Manual
		y0 50 0A FF	Shutter Priority
		y0 50 0B FF	Iris Priority
		y0 50 0D FF	Bright
CAM_ShutterPosInq	81 09 04 4A FF	y0 50 00 00 0p 0q FF	pq: Shutter Position
CAM_IrisPosInq	81 09 04 4B FF	y0 50 00 00 0p 0q FF	pq: Iris Position
CAM_GainPosInq	81 09 04 4C FF	y0 50 00 00 0p 0q FF	pq: Gain Position
CAM_BrightPosInq	81 09 04 4D FF	y0 50 00 00 0p 0q FF	pq: Bright Position
CAM_ExpCompModelInq	81 09 04 3E FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ExpCompPosInq	81 09 04 4E FF	y0 50 00 00 0p 0q FF	pq: ExpComp Position
CAM_BacklightModelInq	81 09 04 33 FF	y0 50 02 FF	On
		y0 50 03 FF	Off

CAM_ApertureInq	81 09 04 42 FF	y0 50 00 00 0p 0q FF	pq: Aperture Gain
CAM_PictureEffectModelInq	81 09 04 63 FF	y0 50 00 FF	Off
		y0 50 02 FF	Neg.Art
		y0 50 04 FF	B&W
CAM_MemoryInq	81 09 04 3F FF	y0 50 0p FF	p: Memory number last operated.
SYS_MenuModelInq	81 09 06 06 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_IDInq	81 09 04 22 FF	y0 50 0p 0q 0r 0s FF	pqrs: Camera ID
CAM_VersionInq	81 09 00 02 FF	y0 50 00 01 mn pq rs tu vw FF	mnpq: Model Code (0504) rstu: ROM version vw: Socket Number (=02)
Information Display	81 09 7E 01 18 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
VideoSystemInq	81 09 06 23 FF	y0 50 00 FF	1920 x1080i/60
		y0 50 01 FF	1920 x1080p/30
		y0 50 02 FF	1280 x720p/60
		y0 50 03 FF	1280 x720p/30
		y0 50 07 FF	1920 x1080p/60
		y0 50 08 FF	1920 x1080i/50
		y0 50 09 FF	1920 x1080p/25
		y0 50 0A FF	1280 x720p/50
		y0 50 0B FF	1280 x 720p/25
		y0 50 0F FF	1920 x1080p/50
IR_Receive	81 09 06 08 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
Pan-tiltMaxSpeedInq	81 09 06 11 FF	y0 50 ww zz FF	ww = Pan Max Speed zz = Tilt Max Speed
Pan-tiltPosInq	81 09 06 12 FF	y0 50 0w 0w 0w 0w 0z 0z 0z 0z FF	www = Pan Position zzzz = Tilt Position
Pan-tiltModelInq	81 09 06 10 FF	y0 50 pq rs FF	pqrs: Pan/Tilt Status
CAM_AnalyticsInq	81 01 0E 24 6E 00 00 FF	[tracking status on/off][current X, Y,	Inquires tracking status, current PTZ position, faces in sight, & when the command was sent