

CAFÉ

DISTINCT BY DESIGN™

It is time appliances had a personality.
Yours.



Drip Coffee
OWNER'S MANUAL

Table of Contents

**Model: OPC7CDAAS3PD31 / OPC7CDAAS2PS31 /
OPC7CDAAS4PW31**

SAFETY INFORMATION.....	4
COMPONENTS.....	5
GETTING STARTED.....	6
SETUP.....	7
Clock	7
Strength	8
Temperature	9
BREWING.....	10
Auto Brew	11
PAIRING.....	12
WIFI.....	12
REGULATORY INFORMATION.....	13
CARE AND CLEANING.....	14
LIMITED WARRANTY.....	16
CONSUMER SUPPORT.....	17

IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

 
WARNING To reduce the risk of fire, explosion, electric shock, or injury when using your coffee maker, **always** follow these basic safety precautions.

■ READ ALL INSTRUCTIONS BEFORE USING

- Use only a 120V, 60Hz standard electrical supply that is properly grounded in accordance with the National Electric Code and local codes and ordinances.
- Do not touch hot surfaces. Use handles and knobs.
- To protect against electric shock, do not place cord, plug, or base unit in water or other liquids.
- Product is for household use only. Do not use outdoors.
- To avoid a possible burn hazard, make sure the carafe is clean, empty and the lid is locked prior to brewing.
- Do not let cord hang over edge of table or counter or touch a hot surface.
- Scalding may occur if the lid is removed during the brewing cycle.
- Unplug appliance before cleaning and when not in use.
- Do not operate if any component, including the cord or plug, is damaged.
- Appliances should not be used by or near children.
- To reduce the risk of fire or electric shock, do not attempt to disassemble, repair, modify, or replace any part of your product.
- Use this product only for its intended purpose as described in this user manual.
- Use of any accessories not recommended by the manufacturer can cause injuries.
- Keep ventilation openings in the appliance enclosures or in the built-in structure, clear of obstruction.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, make sure no coffee brewing, then remove the plug from wall outlet.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- Do not use an extension cord.

READ AND SAVE THESE INSTRUCTIONS

Components

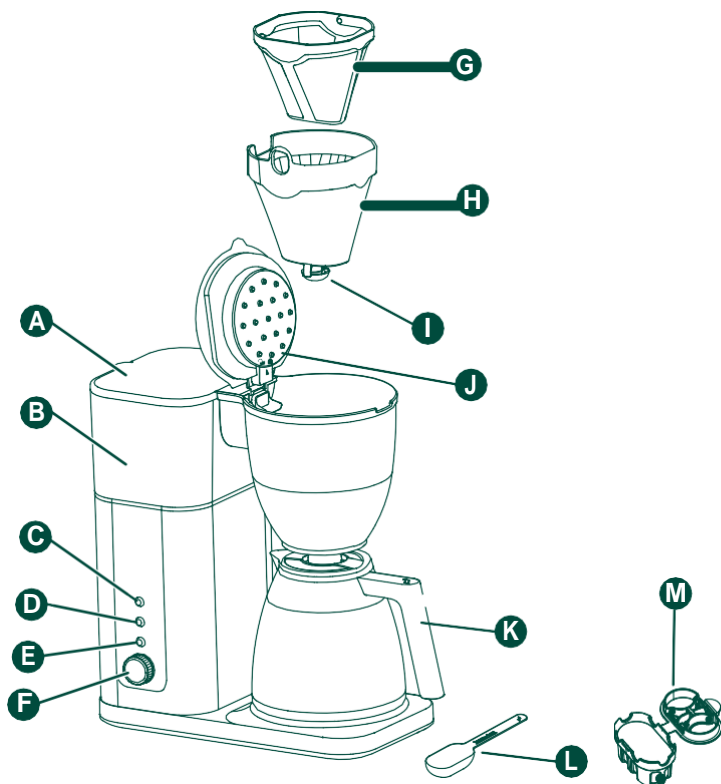

- A** Tank Lid
- B** Water Reservoir
- C** Strength Button
- D** Temperature Button
- E** Auto Brew Button
- F** Brew/Cancel/Select Dial
- G** Mesh Basket Filter

- H** Brew Basket Insert
- I** Drip Stop Lever
- J** Showerhead
- K** Thermal Carafe
- L** Measuring Scoop
- M** Carbon Filter

Getting Started

INSTALLATION REQUIREMENTS

- Product is designed to be installed indoors. Do not use your coffee maker outdoors.
- Product must be installed upright on a flat, level surface that is able to support the total weight when full of water.
- Install the product in a well-ventilated area with an ambient temperature between 55°F and 90°F.
- Do not place the product near heat sources such as ovens or cooktops.
- Do not place the product in direct sunlight.
- Make sure product cannot be accessed by children or animals.

PREPARE COFFEE MAKER FOR USE

- 1 Carefully remove packing material. Do not use sharp tools that can damage the box contents.
- 2 Ensure all components are present. If any item is missing, please contact us at <https://www.onpointwarranty.com/small-appliances-cx-portal>
- 3 Place the coffee maker upright on a flat, level surface. Make sure the coffee maker is UNPLUGGED at this time.
- 4 Wipe the exterior with a soft, damp cloth. Wash the mesh filter, brew basket, and carafe in warm, soapy water and a soft cloth. Do not use abrasive cleansers, pads or cloths which can scratch the surface. Rinse and dry thoroughly. Coffee maker parts are NOT dishwasher safe.
- 5 Plug the coffee maker into an electrical outlet. Clock flashes AM 12:00.

Setup

CLOCK

 
- Push the Temperature button and hold for 3 seconds. Clock illuminates on the display and the white dot on the Temperature button will illuminate.
- To set AM/PM: Rotate the Brew/Select knob and push to select.

To set Hour: Rotate the Brew/Select knob and push to select.

To set Minutes: Rotate the Brew/Select knob and push to select.

After you confirm to quit, the outer ring will illuminate. Thering will not illuminate to confirm each selection.

NOTE: Push and hold the Brew/Select knob for 3 seconds at any time to exit the sub-menu and revert to the previous settings.

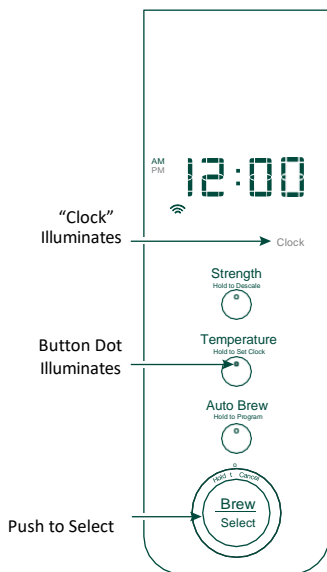

Setup

STRENGTH

- Push the **Strength** button. The strength options and Strength button illuminate. The Strength options are **Gold, Light, Medium, and Bold**.

GOLD: Brewing to the optimum strength using set parameters. This selection will brew coffee to the highest quality. Cups available are 1 - 10. The temperature selection is not changeable in GOLD. If at high elevation, over 5000 feet, do not use this selection.

 
For a more personal experience or at high elevation (over 5000 feet) utilize the Light, Medium, or Bold strength. The cup selection is from 1 to 10 by whole cup increments. The temperature selection is between 185 to 205°F. Recommendation is from 195-205° for best flavor extraction.

LIGHT: Brewing to the lighter strength is for those who prefer a little lower extraction of flavor.

MEDIUM: Brew to the optimum strength with the option to brew different cup sizes and to brew at different temperatures.

BOLD: Bold is for those who prefer a little higher extraction of flavor.

- Rotate the **Brew/Select** knob to select the strength and push to select or push the **Strength** button to confirm your selection. The outer ring of the Brew/Select knob will illuminate to confirm selection when pushed.

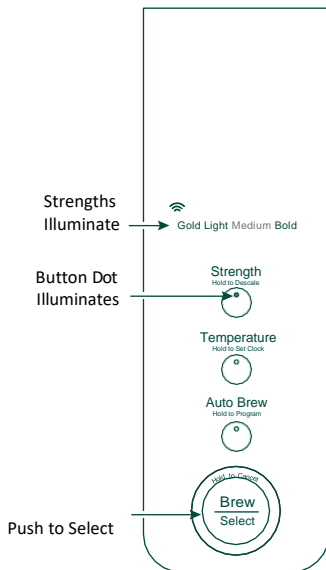

Setup

 
TEMPERATURE

This coffee maker is regulated for temperatures between 185 and 205° F. It is recommended to brew between 195 to 205° F for best flavor extraction. For altitudes over 5000 feet, use 185° F to prevent water from boiling.

NOTE: Temperature cannot be changed if Gold Setting is selected.

- Push the **Temperature** button. The Temperature button illuminates, and the display shows 200.
- Rotate the **Brew/Select** knob to select the temperature and push to select or push the **Temperature** button to confirm your selection. The outer ring of the Brew/Select knob will illuminate to confirm selection when pushed.
- To switch from Fahrenheit to Celsius, press and hold the Strength and Temperature buttons simultaneously for 3 seconds.

CAUTION High Altitude: For use in high altitudes, adjust temperature down to 185° F so water will not boil.

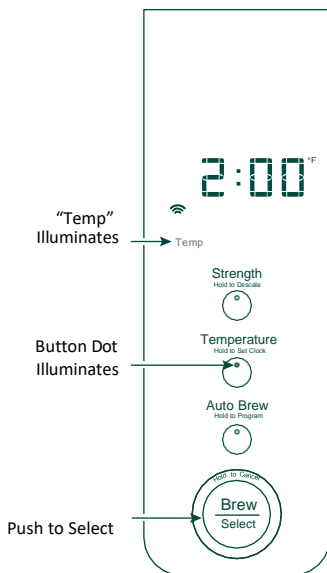

Brewing

- Ensure the brew basket insert and drip stop lever in the bottom of the insert are clean and that the brew basket insert is in the brew basket.
- Use either the mesh basket filter (included) or a No. 4 paper filter (not included) and place into the brew basket insert.
- Ensure the carafe (included) is clean, empty, and the lid is locked. Make sure the carafe is in place before brewing. This coffee maker will NOT brew without the carafe in place. The top of the carafe MUST be engaged with the drip stop lever on the bottom of the brew basket. If not, the water won't flow into the carafe and the basket may overflow during the brewing cycle. If the carafe is not in place when the brewing cycle is selected, the display will show "CUPS" and the coffee maker will chime.
- **Water:** This coffee maker is designed to use only the amount of water for the number of cups selected to be brewed. Fill the water reservoir with fresh, clean, and odorless (free of chlorine and sulfur) water up to the MAX level indicator. DO NOT overfill the water reservoir. Water should have some minerals for best flavor. Reverse Osmosis (RO) systems or distilled water does not have minerals and is not recommended for coffee brewing.
- During brewing, if there is not enough water in the reservoir for the number of cups to be brewed, an error message (Add H2O) will show on the display telling you to add more water and a chime will sound. Push the knob to confirm that you are adding water. Once the water is added, push the knob again to continue brewing. DO NOT add water during brewing unless the error message is displayed.
- **Coffee:** The type of coffee and freshness is a large factor in the flavor, taste and aroma of brewed coffee. The grind size of the coffee is for brewing using the drip method.
- Use the scoop (included) to measure the correct amount of coffee for the number of cups you are brewing. The measuring scoop is designed for one level scoop of coffee per 4.5 oz serving of coffee being brewed (4.5 oz of water per serving is the common measurement for a regular cup of coffee).

Place the coffee into the filter in the brew basket.

TO BREW:

 
- After setup of strength and temperature, push the **Brew/Select** knob. The number of cups will illuminate on the display along with the last strength that was chosen. Rotate the Brew/Select knob to choose the number of cups of coffee you want to brew. Push the Brew/Select knob to confirm. Brewing will start.

Brewing

AUTO BREW:

- Auto Brew will let you start brewing automatically at a preset time.
- Push the Auto Brew button for 3 seconds to program. Rotate Brew/ Select knob to select AM/PM and push to confirm. Then push the Auto Brew button to reconfirm AM/ PM. Set the hour and minutes in the same manner pressing Auto Brew after each. Next, set the number of cups by turning the Brew/Select knob and push to confirm. Set the strength and temperature in the same manner. Once all of the selections have been made, the Brew/Select knob illuminates. Push Auto Brew to confirm your choices. Auto On will illuminate to indicate that Auto Brew is active.


NOTE: If Gold strength is selected, you will not be able to select a temperature. The Gold setting is a pre-set program that includes a select temperature. Do not use for high elevations (over 5000 feet).

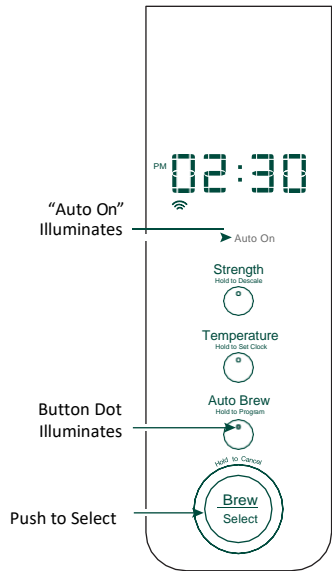

Pairing

Pairing Mode enables all of the functions of your coffee maker to be controlled over Wi-Fi after downloading the app. For example, you may want to customize your Auto Brew schedule—one for weekdays and one for weekends.

 To put your device into Pairing Mode, press and hold the **Auto Brew** and **Temperature** buttons at the same time for 3 seconds. You should see the Wi-Fi symbol illuminate under the Time Display. Now your device is ready for Pairing using the instructions given in the app.

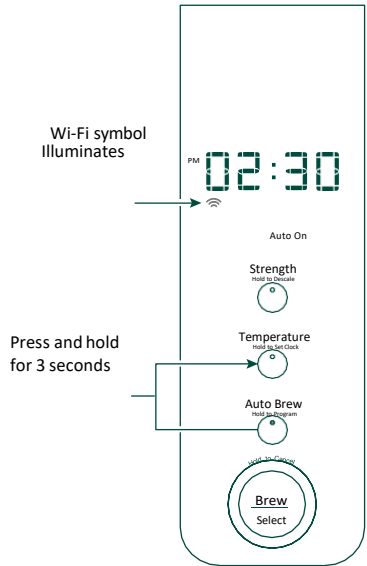

Wi-Fi

WIFI CONNECT

Your coffee maker is Café Wi-Fi Connect Enabled. A Wi-Fi communication card is built into the product allowing it to communicate with your Smart Phone for remote monitoring, control, and notifications. Please visit cafeappliances.com/connect to learn more about connected appliance features, and to learn what connected appliance App's will work with your Smart Phone.

Wi-Fi Connectivity: For assistance with the appliance or the network connectivity, please visit cafeappliances.com/connect.



Regulatory Information

FCC/IC COMPLIANCE STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help. This device complies with

Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Labeling: Changes or modifications to this unit not expressly approved by the manufacturer could void the user's authority to operate the equipment.

ConnectPlus module only (or similar communication module)

RF Exposure - This device is only authorized for use in a mobile application. At least 20 cm of separation distance between the ConnectPlus device and the user's body must be maintained at all times.

FCC ID: ZKJ-WCATA006

IC ID: 10229A-WCATA006

Notes

Refurbished Goods Limited Warranty Statement

LIMITED WARRANTY TO ORIGINAL PURCHASER

This refurbished product, as sold by Dealer to the original consumer purchaser, is warranted by OnPoint Warranty Solutions, LLC against manufacturing defects in materials and workmanship for a limited warranty period of: One (1) year Parts and Labor.

To Schedule Service go:

<https://www.onpointwarranty.com/small-appliances-support>

(Do not Call GE).

This limited warranty begins on day 1 after the original date of purchase and is valid only on products purchased and used in the United States. To receive warranty service, the purchaser must contact OnPoint Warranty Solutions (OPW) for problem determination and service procedures. Warranty service can only be performed by an OPW authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to OPW or OPW authorized service center.

OPW will repair or replace any product found to be defective, at our option and at no charge as stipulated herein, with reconditioned product during the limited warranty period specified above. All replaced products become the property of OPW and must be returned to OPW. Replacement products assume the remaining original warranty. Also, at our option, due to service availability, we may provide a gift card or check in lieu of repair or replacement for the amount the consumer purchase. Proof of Purchase will be required.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product, and shall not apply to the following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts,

supplies, accessories, applications, installations, repairs, external plumbing and leaks, external wiring, circuit breakers, fuses or connectors not supplied and authorized by OPW, or which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; loss of food due to spoilage; consumable items including filters and light.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON OPW. OPW SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF OPW HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST OPW BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY DEALER AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY DEALER NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF OPW. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Consumer Support

OnPoint Warranty/Small Appliances Website

Have a question or need assistance with your appliance? Try the Small Appliances Website 24 hours a day, any day of the year! <https://www.onpointwarranty.com/small-appliances-cx-portal>

REGISTER YOUR APPLIANCE

Register your new appliance on-line at your convenience! Timely product registration will allow for enhanced communication and prompt service under the terms of your warranty, should the need arise. <https://www.onpointwarranty.com/small-appliances-cx-portal>

CONNECT WITH YOUR SMART APPLIANCE

Download the free SmartHQ™ app for your Apple or Android smartphone.

For Apple smartphones, visit <https://apps.apple.com/us/app/ge-kitchen/id992883749>

For Android smartphones, visit

<https://play.google.com/store/apps/details?id=com.ge.kitchen&hl=en>

PARTS AND ACCESSORIES

Individuals qualified to service their own appliances can have parts or accessories sent directly to their homes

(VISA, MasterCard and Discover cards are accepted). Order on-line today 24 hours every day.

cafeappliances.com/parts

Instructions contained in this manual cover procedures to be performed by any user.

Other servicing generally should be referred to qualified service personnel. Caution must be exercised, since improper servicing may cause unsafe operation.

CONTACT US

We can be reached at <https://www.onpointwarranty.com/small-appliances-cx-portal>