

Mechanical & Electric
KETTLES

SAFETY INFORMATION 3
CONTROLS 4
USING THE KETTLE 5
CARE AND CLEANING 5
TROUBLESHOOTING 6
LIMITED WARRANTY 7
CONSUMER SUPPORT 8

OWNER'S MANUAL

OPG7KE17SSPSS

OPG7KD15SSPSS

ENGLISH

Write the model and serial numbers here:

Model # _____

Serial # _____

Find these numbers on a label
on the back of the unit.

IMPORTANT SAFETY INFORMATION

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

WARNING

Read all safety instructions before using the product. Failure to follow these instructions may result in fire, electrical shock, serious injury, or death.

IMPORTANT SAFETY INFORMATION

General

- READ ALL INSTRUCTIONS
- To avoid a risk of burn, never touch hot surfaces and/or hot water. Always use handles or knobs.

WARNING

- To prevent fire, electric shock, and personal injury, do not immerse the product, its cord, its plug or its power base in water or other liquid.
- When using electrical appliances ALWAYS follow basic safety precautions to reduce risk of fire, electric shock, injury to persons.
- This product is intended for household use only.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Close supervision is necessary when any appliance is used by or near children.
- To avoid risk of scalding, do not open the lid while the water is heating.
- Heater may remain hot after the kettle is turned off.

Power Cord

- Never operate a product whose power cord and/or plug are damaged.
- The replacement and repairs of the power cord must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid hazard.
- If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance.
- Do not operate the appliance with wet hands or while standing on a wet floor.
- Never pull on the cord. This may damage the cord and increase the risk of electric shock.
- Do not let cord hang over edge of table or counter. Do not let the cord touch any hot surface.

Using the Kettle

- Do not immerse the unit in water or a dishwasher for cleaning purposes.
- Do not try to block the steam from emitting through the spout (Not sure if this applies to our unit)
- Keep appliance at least 4 inches away from walls and other objects while operating. Place the appliance on a heat resistant surface. Do not put anything on top of the appliance during operation.
- Never operate a product after it malfunctions or has been dropped or damaged in any manner.
- Never use accessories which are not recommended by the manufacturer, including external timers. They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
- Do not use outdoors.
- Always unplug the product when not in use and before cleaning. Allow to cool before touching the product, putting on or removing parts and before cleaning.
- To disconnect, turn the product off and remove the plug from the wall outlet.
- Do not use appliance for other than intended use.
- ONLY use the product for heating water. Liquids other than water will tarnish the inside of the product and void the warranty.
- Never let the product boil dry.
- To prevent circuit overload, do not plug another high wattage appliance into the same circuit.
- Make sure the lid is securely in place while the water is heating up and when pouring it out.

ELECTRICAL CORD

NOTE: If the power cord is damaged, please contact the warrantor listed in the back of this manual.

The particular length of the power cord of this appliance is meant to reduce the risk of becoming tangled in it and/or tripping on it. Should the length of this cord be insufficient, use an approved extension cord. The marked electrical rating of the extension cord shall be equal to (or greater than) that of the appliance. If the appliance is of the grounding type, the extension cord should be a grounding type, 3-wire cord. Lay the extension cord down so that it will not hang down from tabletop or countertops where it can be pulled on by children or create risk of tripping over it.


This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

READ AND SAVE THESE INSTRUCTIONS

Parts Included

G7KE17SSPSS


G7KD15SSPSS

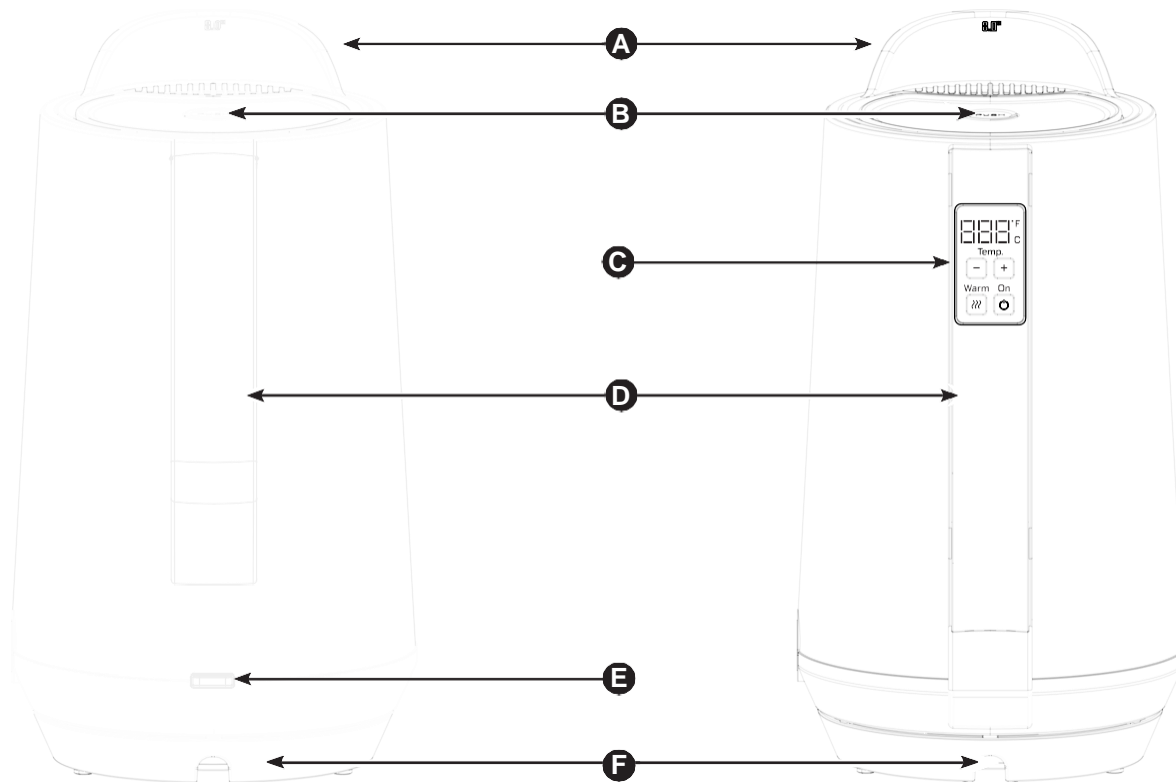

- A** Spout
- B** Lid Opening Button
- C** Control Panel (Electric model only)
- D** Handle
- E** LED Indicator (Mechanical model only)
- F** Base

Controls

Control Panel (Electric model only)

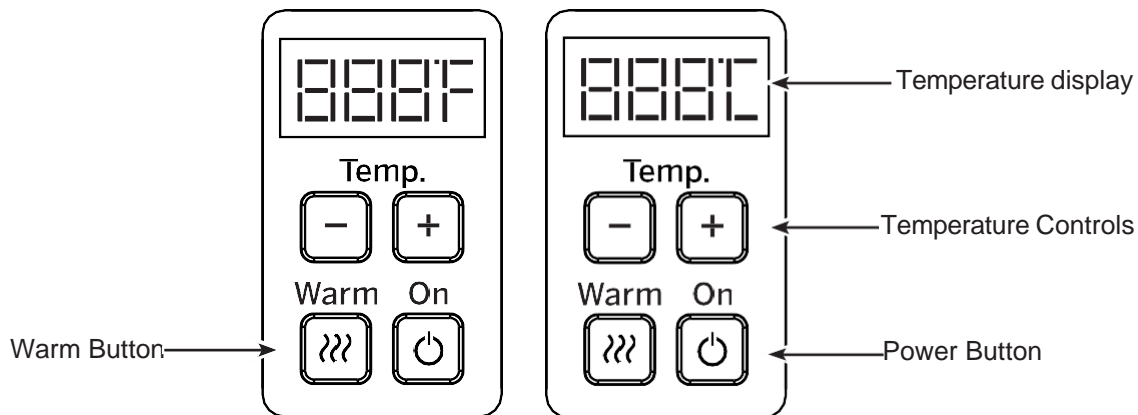

Using the Kettle

Before Getting Started

When using for the first time or after a lengthy period of disuse, we recommended to fill the product up to the Max mark with cold water, bring to boil, then discard the water and repeat. This will remove potential extraneous and unwanted residues.

Operation of Mechanical Model: G7KE17SSPSS

This appliance is for household use only.

- Press the lid release button to open the lid.
- Fill the product with water (Do NOT fill above the max line).
- Fill at least 2 cups of water.
- Close the lid. Place the product on the base.
- Connect the plug to a power outlet. Press the On/Off switch down.
- The light goes on, the product is now heating the water.
- The product will switch off automatically when the water starts boiling. The light will then go out.
- The product features a safety switch that shuts it down if it boils dry. If this should occur, remove it from the base and wait until it cools down before using it again. NOTE: The kettle should ONLY be used with the base provided.

Operation of Electric Model: G7KD15SSPSS

This appliance is for household use only.

- Press the lid release button to open the lid.
- Fill the product with water (Do NOT fill above the max line).
- Fill at least 2 cups of water.
- Close the lid. Place the product on the base.
- Connect the plug to a power outlet. Press the Power button located on the product handle.
- Choose desired temperature using the +/- buttons.
- The product will switch off automatically when the water reaches the set temperature.
- The product features a safety switch that shuts it down if it boils dry. If this should occur, remove it from the base and wait until it cools down before using it again. NOTE: The kettle should ONLY be used with the base provided.

Burn Hazard! Do not overfill kettle:

- Water might enter the steam tube and leak from the bottom of the product
- Boiling water might spill out of the spout.

Care and Cleaning

- Regular cleaning will prolong the lifespan of the product.
- Always unplug from the plug socket and allow to cool down before cleaning. Do not immerse any part of the product in water or other liquid.
- It is normal for stainless steel to discolor.
- Do not use chemical or abrasive agents (or tools) to clean the outside of the product. These may damage the outside surface.
- Fill the product up to the MAX mark with a half water, half white vinegar solution and let it sit for over 1 hour to descale.
- Pour the solution out of the product. Wipe off the residues (if any) with a damp cloth.
- Fill the product with clean water, bring to boil and then discard the water.
- To clean the kettle thoroughly, it may be necessary to repeat the cleaning process above several times.
- Wipe the outside surface with a damp cloth and then wipe dry with a soft cloth.
- Any other servicing should be performed by an authorized service representative.

Small Appliances Limited Warranty

Please have your serial number and your model number available when requesting service at <https://www.onpointwarranty.com/small-appliances-cx-portal>

For Terms and Conditions, please visit

https://f.hubspotusercontent20.net/hubfs/4854028/GE_First%20Build/RefurbGoodsT&C.pdf

LIMITED WARRANTY

Staple your receipt here. Proof of the original purchase date is needed to obtain service under the warranty.

Consumer Support

Service and Registration

Register your new appliance on-line at your convenience! Timely product registration will allow for enhanced communication and prompt service under the terms of your warranty, should the need arise.

Register your appliance at <https://www.onpointwarranty.com/small-appliances-cx-portal>

Contact Us

If you are not satisfied with the service you receive from OnPoint Warranty, contact us on our Website with all the details including your phone number, or write to: 9900 Corporate Campus Drive, Suite 2050, Louisville, KY 40223