

Full set the system

1. Enter [user code]
2. Press [yes/part] Exit tone sounds.

Part set the system

1. Enter [user code]
2. Press [yes/part]
3. Press [yes/part] Exit tone sounds.

Unset the system

1. Enter [user code] Display shows [_ _].

Reset system after alarm condition

1. Enter [user code] Display shows [?].
2. Press [yes/part] Before the system has time to set.
3. Enter [user code] Display shows [_ _], system now reset.

Remote reset after alarm condition

1. If display shows [AL]
2. Enter [user code] Display shows [?].
3. Press [yes/part] Display shows [En], then a four digit number.
4. Quote above four digit number to alarm company Ask for a "remote or coded reset."
5. Phone your alarm company and ask for a coded reset, and give them your noted down number.
6. Enter [reply code from alarm co]

Omit a zone

1. Enter [user code] Display shows [?].
2. Press [no] Within 20 seconds, display shows [O].
3. Press [yes/part] Display shows [O-], select the zone to be omitted by pressing the corresponding key.
4. Press [yes/part] To confirm selection.
5. Press [yes/part] Again to confirm selection, display shows [O-], ready to accept the next

zone to be omitted.

6. Press [0/esc] The zones selected will be omitted next time the system is set. Display shows [_].

Change your own user code

1. Enter [user code] Display shows [?].
2. Press [no] Within 20 seconds, display shows [O].
3. Press [no] Display shows [tE].
4. Press [no] Display shows [bE].
5. Press [no] Display shows [Lo].
6. Press [no] Display shows [Ch].
7. Press [no] Display shows [Co].
8. Press [yes/part] Display shows [U-].
9. Press [1] Display shows [--].
10. Enter new [User code]
11. Press [yes/part] to confirm the selection. Display shows [rE].
12. Enter new [User code] Again to confirm the selection.
13. Press [yes/part] If re-entered correctly a short tone is generated. Display shows [U-].
14. Press [0/esc] Display shows [Co].
15. Press [0/esc] Display shows [_].

Test the alarm sounders

1. Enter [user code] Display shows [?].
2. Press [no] Within 20 seconds, display shows [O].
3. Press [no] Display shows [tE].
4. Press [no] Display shows [bE].
5. Press [yes/part] The external devices will now sound and if fitted the strobe will flash.
6. Press [0/esc] Display shows [bE]
7. Press [0/esc] Display shows [_]

[walked]

1. Enter [user code] Display shows [?].
2. Press [no] Within 20 seconds, display shows [O].

- | | | |
|----|------------------|--|
| 3. | Press [no] | Display shows [tE]. |
| 4. | Press [yes/part] | Display shows [=]To walt test zone, speaker and keypad will both sound when zone is passed trough. |
| 5. | Press [yes/part] | to escape walk test. |
| 6. | Press [0/esc] | Display shows [tE] |
| 7. | Press [0/esc] | Display shows [_ _] |

Setup user codes

- | | | |
|-----|------------------------|--|
| 1. | Enter [user code] | Display shows [?]. |
| 2. | Press [no] | Within 20 seconds, display shows [O]. |
| 3. | Press [no] | Display shows [tE]. |
| 4. | Press [no] | Display shows [bE]. |
| 5. | Press [no] | Display shows [Lo]. |
| 6. | Press [no] | Display shows [Ch]. |
| 7. | Press [no] | Display shows [Co]. |
| 8. | Press [yes/part] | Display shows [U-]. |
| 9. | Press [2] | Display shows [t-], enter the code type from 1-7 |
| 10. | Press [yes/part] | Display shows [--]. |
| 11. | Enter new [User code]. | |
| 12. | Press [yes/part] | Display shows [rE]. |
| 13. | Enter new [User code] | Again to confirm the selection. |
| 14. | Press [yes/part] | if re-entered correctly a short tone is generated. Display shows [U-]. |
| 15. | Press [0/esc] | Display shows [Co]. |
| 16. | Press [0/esc] | Display shows [_ _]. |

View the event log

- | | | |
|----|-------------------|--|
| 1. | Enter [user code] | Display shows [?]. |
| 2. | Press [no] | Within 20 seconds, display shows [O]. |
| 3. | Press [no] | Display shows [tE]. |
| 4. | Press [no] | Display shows [bE]. |
| 5. | Press [no] | Display shows [Lo]. |
| 6. | Press [yes/part] | |
| 7. | Press [yes/part] | To scroll forward to show more recent |

events

- 8. Press [0/esc] Display shows [Lo].
- 9. Press [0/esc] Display shows [_ _]

Set control panel time/clock

- 1. Enter [user code] Display shows [?].
- 2. Press [no] Within 20 seconds, display shows [O].
- 3. Press [no] Display shows [tE].
- 4. Press [no] Display shows [bE].
- 5. Press [no] Display shows [Lo].
- 6. Press [no] Display shows [Ch].
- 7. Press [no] Display shows [Co].
- 8. Press [no] Display shows [CL].
- 9. Press [yes/part] Display shows [d-], Enter date and month.
- 10. Press [yes/part] to confirm. Display shows [t-]. Enter the time in 24 hour mode.
- 11. Press [yes/part] to confirm. Display shows [?]
- 12. Press [0/esc] Display shows [_ _]