


Configuring NETePay with CAP Sellwise and Cash n Carry

Note: Resellers should contact Datacap for installation and configuration help specific to NETePay. CAP only supports NETePay version 5.0 and up. A dsiPDCX compliant device is also required. See the CAP document "Datacap NETePay Ordering and Configuration Guidelines for CAP Pro 9" for additional information.

1) Once NETePay is configured and registered, confirm the number of NETePay lanes matches the number of CAP stations set to accept credit cards.

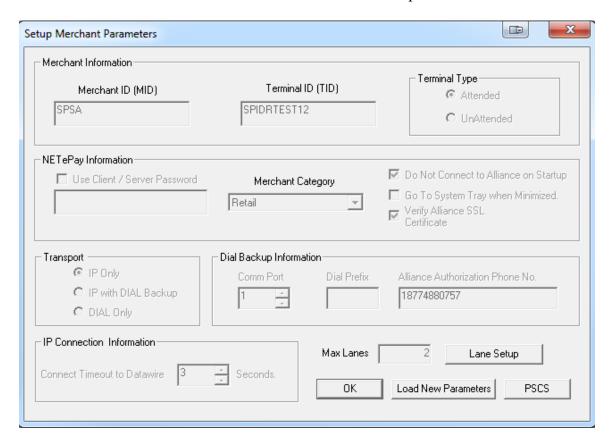

- 2) Load the proper drivers for your payment device:
- a) UIC PP795:
 USB to Serial driver
 http://www.capsupport.com/drivers/uic/PP795.zip


b) Verifone VX 805:
Requires **XPI Version 6.42** or above
USB to Serial driver
http://www.capsupport.com/drivers/verifone/Vx805.zip

Additional Verifone VX 805 Documentation and utilities: http://www.capsupport.com/drivers/verifone/VX805docs.zip


CAP Configuration



- 1) Go to Configuration>>Tender Settings>>Configure EDC>>
- 2) Select the NETePay Sever option and set to "Yes"
- 3) Enter the Merchant ID
- 4) Enter the Name of the PC with NETePay server (the machine with NETePay installed) in the NETePay/MPS Server Name field
- 5) Configure the payment device from the list in the 'Select EDC Device' drop down
- 6) Press 'Accept' when finished

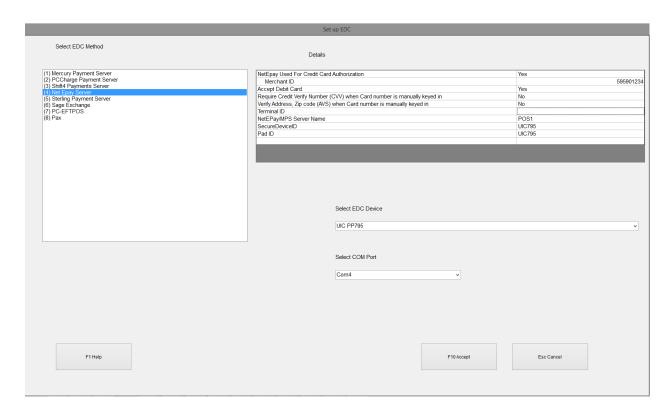

7) Setup applicable tender types in 'Tender Settings'

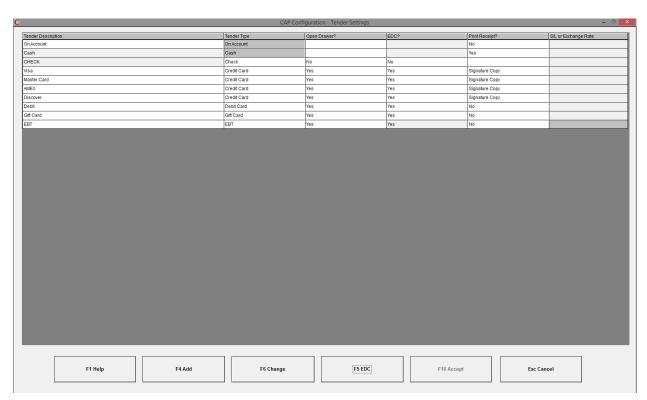

8) Restart the CAP application. Now the system is ready to sell using NETePay