


Network Video Recorder 360iQ for your business

ANALOG AND IP CAMERAS

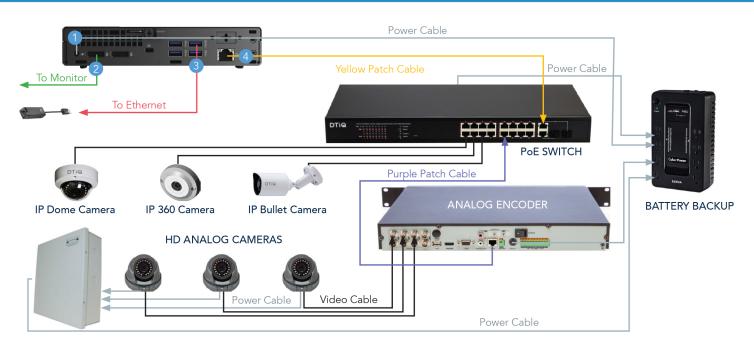

Do not power on the server until all connections have been made

- 1. Connect the Power Cable to the Battery Backup.
- 2. Connect the VGA Cable to the display port. Then connect the other end of the VGA Cable to the monitor.
- 3. Connect the USB Cable to the Ethernet.
- 4. Connect the Yellow Patch Cable to the PoE Switch.
- 5. Power on your server.
- 6. Check your 360iQ app. You should now be able to view all of your cameras.
- 7. For issues, call 800-933-8388 or email support@dtiq.com.



DELL