


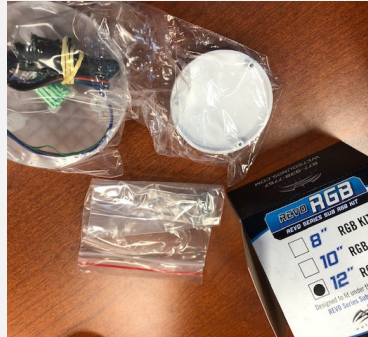


REVO 12 LED Modification

- To add a led to your Wet Sounds REVO sub-woofer you will need the following parts.
1. The subwoofer grille for your application size and style, as we have several options in each.
 2. The RGB KIT for your correct size.
 3. An RGB LED light controller. Several options are available.



STEP 1

The first step is to remove the badge by removing the 3 screws from the back of the grille. For the REVO 12 HP, this will be replaced with the badge with the correct orientation for LED alignment.

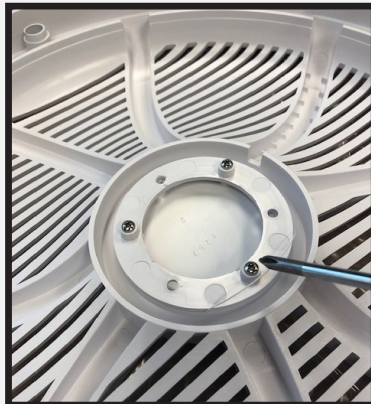

STEP 2

The track for the LED wire and the notch in the basket of the subwoofer must line up. This is to ensure the led wires won't get pinched when mounting the subwoofer.



STEP 3

Mount the LED assembly. Be sure to line up the holes with the grille and the replacement badge. You will use the longer screws included in the LED kit.




STEP 4

Make sure to align the notch in the LED assembly to hold the RGB wires.



STEP 5

Peel and stick the adhesive on the back of the wires and apply to the grille. Use the track as a guide.

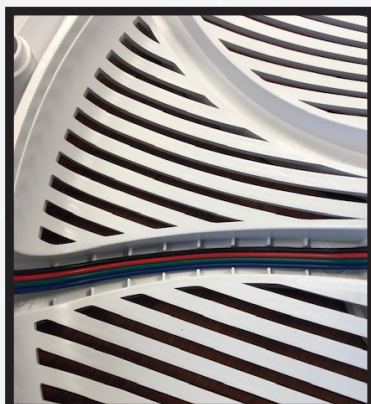

STEP 6

Make sure your grille and badge are aligned properly and install your subwoofer.

