## STICK PIN INSTALLATION INSTRUCTIONS

ATTENTION: If you have additional questions after reviewal of this manual please contact your local ASI representative or an ASI professional at our headquarters (952)448-5300

ASI MANUFACTURES DECORATIVE ACOUSTICAL PANELS AND PRODUCTS THAT MUST BE HANDLED WITH CARE. PRODUCTS SHOULD ONLY BE INSTALLED BY EXPERIENCED INSTALLERS.

## RECEIVING


Prior to unpacking, check package for any obvious shipping damage. If no evidence of damage is present, move package to a dry/controlled area and inspect it for dents, breakage, or any lesser-noticeable damage that may affect enclosed panels. If damage has been identified, record it/photograph it, and open to inspect for concealed damage. If damage was transferred to the product, document/photograph the issues.

## TOOLS

stick pins (supplied); screws (one per stick pin); construction adhesive (Liquid Nails or similar)

## **INSTALLATION**

Layout all panel locations. Inspect mounting surface to ensure suitability for panel mounting. Secure stick pins to wall (or ceiling) using GREENchoice Panel Adhesive, Liquid Nails, or similar construction adhesive. If mounting to ceiling, fasten pins to structure with screws (by installer) appropriate for the mounting surface. To apply adhesive to pin, smear adhesive onto back of pin over entire surface in sufficient thickness to make good contact with the structure. Amount should not be so thick that a significant amount of construction adhesives oozes through holes in clip - minimal oozing is ok, significant oozing could impede panel mounting. Once adhesive has set, simply push panel onto the pins so that the pin sticks through the front of the panel. Secure panel using washers. Using a cutting tool, cut pin to desired length. Optional dome caps can be applied to cover remaining pin tip.

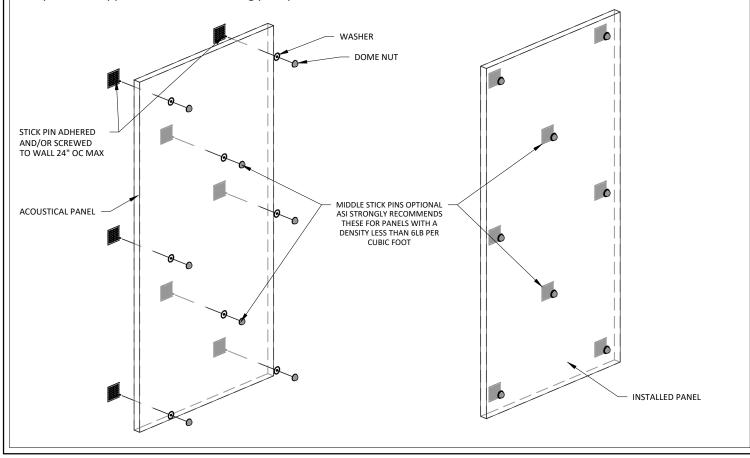



STICK PIN INSTALLATION INSTRUCTIONS

SHEET NUMBER

1

SCALE: AS NOTED LAST REVISED: 10/27/2020 DRAWN BY: BH