


SUPPLEMENTAL INSTALLATION INSTRUCTIONS
ASSA ABLOY Concord CC4000

ASSA ABLOY

ASSA ABLOY Entrance Systems


165 Carriage Court, Winston Salem, NC 27105
www.assaabloyentrance.us
844-232-4676

Section Installation Details

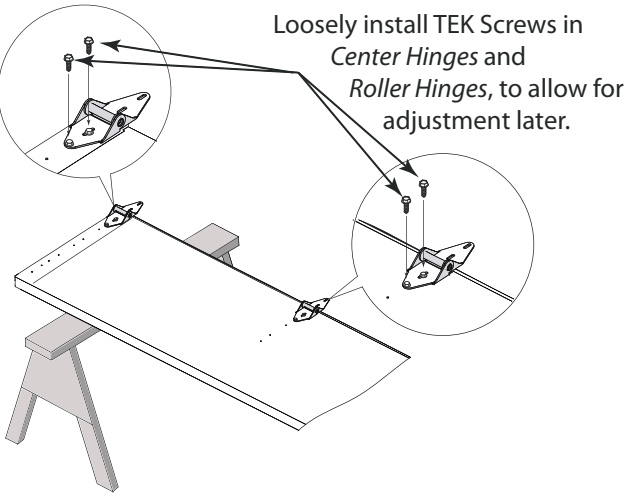

Loosely install TEK Screws in
Center Hinges and
Roller Hinges, to allow for
adjustment later.

Each door will include a section label in
the top left corner, with #1 being the
bottom, #2 being the next section, etc.
This order is necessary to create the
pattern required for your door.

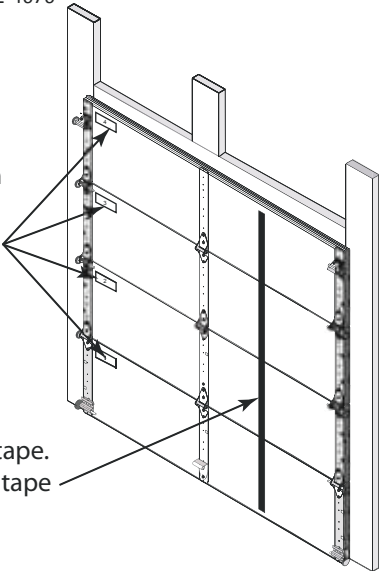


Each door will include alignment tape.
When all sections are aligned, the tape
will be in a straight line.

Section Arrangement Chart


Laurelbay (LB)




Pinetop (PT)

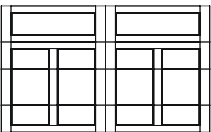


Bradberry (BB)

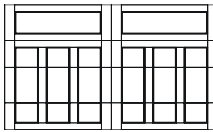


Seabrook (SB)

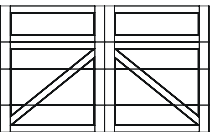

Kensington (KS)

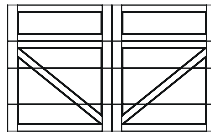


Rosemont (RM)

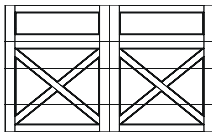


	6'6"	6'9"	7'	7'3"	7'6"	7'9"	8'
#4	24	24	24	24	24	24	24
#3	18	18	18	21	24	24	24
#2	18	21	24	21	18	21	24
#1	18	18	18	21	24	24	24
	78	81	84	87	90	93	96

	8'3"	8'6"	8'9"	9'	9'3"	9'6"	9'9"	10'
#5	24	24	24	24	24	24	24	24
#4	18	18	21	24	21	24	24	24
#3	18	21	18	18	21	21	21	24
#2	18	21	18	18	21	21	24	24
#1	21	18	24	24	24	24	24	24
	99	102	105	108	111	114	117	120


Charlton (CT)

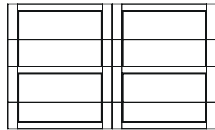


Fairfield (FF)

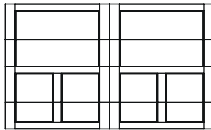


Middleton (MD)

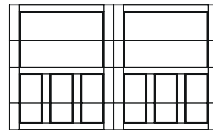


Newberry (NB)

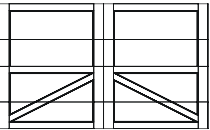


Darby (DB)

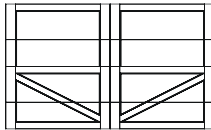


Tanglewood (TW)

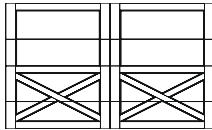

Ashley (AS)

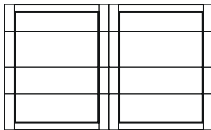

Greenbrier (GB)

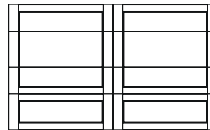

	6'6"	6'9"	7'	7'3"	7'6"	7'9"	8'
#4	18	18	18	21	24	24	24
#3	18	21	24	21	18	21	24
#2	18	18	18	21	24	24	24
#1	24	24	24	24	24	24	24
	78	81	84	87	90	93	96

	8'3"	8'6"	8'9"	9'	9'3"	9'6"	9'9"	10'
#5	21	21	24	24	24	24	24	24
#4	18	18	21	24	21	24	24	24
#3	18	21	18	18	24	24	24	24
#2	18	18	18	18	18	18	21	24
#1	24	24	24	24	24	24	24	24
	99	102	105	108	111	114	117	120