SOLUTIONS FOR CREATING PATIENT ISOLATION SPACES

Products to help reduce the spread of infectious airborne pathogens and particulates





605

ABATEMENT TECHNOLOGIES

MAIN OFFICES

Abatement Technologies US 605 Satellite Blvd. Suite 300 Suwanee, GA 30024 US 800-634-9091 Intl. +01-678-889-4200 iaqinfo@abatement.com

Abatement Technologies CA 7 High Street Fort Erie, ON L2A 3P6 CAN. 800-827-6443 Intl. +01-905-871-4720 iaqinfo@abatement.ca

SATELLITE OFFICES

Vancouver F102-19720-94A Avenue, Langley, BC V1M 3B7 778-372-2611

Hamilton 428 Millen Rd. Unit 10 Stoney Creek, ON L8E 3N9 905-664-6075

St. John's 5 Maverick Place Paradise, NL A1L 1Y8 709-800-9020 **Ottawa** 51 Capital Drive Ottawa, ON K2G OE7 613-749-9667

Dartmouth 121 Ilsley Ave Unit 12

Dartmouth, NS B3B 1J1 902-334-0900

Moncton 1070 St. George Blvd Unit 100 Moncton NB E1E 4K7 506-406-5999 Edmonton 16403 - 117 Ave. NW Edmonton, AB T5M 3V3 780-665-5165

0

Toronto 144 Sharer Rd. Vaughan, ON L4L 8P4 905-266-1322 Montreal

1950 Bernard Lefebvre Laval, QC H7C 0A5 514-375-0606

Calgary F-7004 5th St. SE Calgary, AB T2H 2G3 403-351-2223

ABOUT ABATEMENT TECHNOLOGIES

For more than 30 years facilities around the world have relied on Abatement Technologies' innovative and adaptable patient isolation and emergency response solutions. Today, Abatement offers a full suite of products designed to help facilities adapt existing spaces to Airborne Infection Isolation Rooms (AIIRs). Enclosed you will find products that HEPA filter air and create positive or negative pressure rooms, products that can monitor and log pressure differential, products that can create ANTEROOMS and other isolation spaces, and much more. Our knowledgeable sales team is available to help you select the correct suite of products for your specific application.

TABLE OF CONTENTS

HEPA-CARE [®] Patient Isolation Systems	3-6
HEPA-CARE [®] Isolation Room Installation Kits	7
HEPA-CARE® Replacement Filters & Accessories Chart	8
Monitors & Instruments	8
Surge Capacity Anteroom & Containment Modules	9
Isolation & Control Products For Construction & Renovation	10-11
PREDATOR [®] & HEPA-AIRE [®] Replacement Filters & Accessories Chart	12-14
Consumables & PPE	15-16

CANADA: 1-800-827-6443 | US: 1-800-634-9091 | ABATEMENT.CA

HEPA-CARE® PATIENT ISOLATION SYSTEMS

PURE AIR FOR HEALTHCARE[®]

For more than 30 years, HEPA-CARE[®] in-room HEPA filtration units have set the standard for reliable and economical solutions for infectious patient isolation. These unique systems are used today in thousands of facilities throughout North America. Two types of HEPA-CARE[®] systems are available: portable models, which can be moved within the facility and deployed wherever they are needed; and, ceiling mounted models, which mount into a drop-ceiling grid.

ALL MODELS FEATURE:

- Powder-coated aluminum cabinet; easy to maintain.
- Strong, leak-resistant cabinet construction.
- Unique zero bypass dual cabinet design protection against contaminated air bypass.
- Intuitive touchscreen with 5 airflow settings.
- Password protection; secure, tamper resistant controls.
- Energy-efficient EC motorized impellers reduce energy use and auditory impact on patients & staff.
- Anti-microbial MERV-8 pre-filter protects against microbial growth & degradation.
- Optional VAPOR-LOCK[®] carbon pre-filter removes low concentrations of gases and odors.
- Sound level @ 5 feet 37-59 dBA range
- All HEPA-CARE[®] HC500 series and HC800 series models are equipped with an H14 Type HEPA filter tested and certified to capture at least 99.995% of microscopic particles 0.3 microns in size

HEPA-CARE® GERMICIDAL BUILT-IN UV OPTIONS

The two portable models may be ordered with built-in UV bulbs, (HC800FDUV and HC500FDUV). UVGI lamps emit germicidal ultraviolet light that helps inhibit the growth of bacteria and viruses and add an extra layer of protection from airborne particulates.

NRTL SAFETY CERTIFICATION

HEPA-CARE[®] systems are registered as Class II Medical Devices under FDA 510K, and certified by a Nationally Recognized Testing Laboratory (NRTL), to comply with relevant OSHA, UL and CSA safety standards.

EXPORT PRODUCTS

Most of the Abatement Technologies electric-powered products in this brochure are available in 230 volt/50 hertz and 230 volt/60 hertz models for overseas customers. Contact our Healthcare Export Sales Department for more information.



HC800FD PORTABLE AIR PURIFICATION SYSTEM

NEW DESIGN with USER-FRIENDLY DIGITAL TOUCH DISPLAY





HEPA-CARE® Filtration Systems

Thousands of healthcare facilities rely on HEPA-CARE[®] systems from Abatement Technologies for their patient isolation needs. The two portable models can be quickly rolled to wherever needed in the facility and used to convert almost any room into a CDC-compliant patient isolation room. The ceiling models mount into a ceiling grid, completely out of the way of patients and staff. All four models are NRTL certified to comply with UL and CSA standards, and come equipped with: touch screen controls with password protection; five airflow settings; an anti-microbial treated pre-filter, and; a 99.995%-efficient HEPA filter.

HC800FD PORTABLE MODEL



The HC800FD is the "premier standard" of portable systems, with top-of-the-line performance and features, and unmatched reliability. It can typically maintain 12+ ACH in rooms 4,000 to 4,625 cubic feet, depending on the installation.

- Peak rated airflow from 150cfm to 925cfm
- Equipped with an H14 Type (International Standard) HEPA filter tested and certified to capture at least 99.995% of microscopic particles 0.3 microns in size
- Pharmaceutical grade HEPA with silicone-gel seal & anodized aluminum frame
- Energy-Efficient EC motorized impellers reduce energy use and noise
- Sound Level @ 5 ft dBA 37 59
- Hinged, front door secures with two Phillips machine screws
- · Louvered front air inlet & optional top & rear exhaust outlets
- Purify the Air with optional Germicidal UV bulbs (HC800FD-UV)

HC500FD PORTABLE MODEL

PART NO: HC800FD / HC800FDUV



This compact model is designed for areas that don't require as much airflow as the HC800FD. It can typically maintain 12+ ACH in rooms 2,250 to 2,375 cubic feet, depending on the installation.

- Peak rated airflow 150cfm to 475cfm
- Equipped with an H14 Type (International Standard) HEPA filter tested and certified to capture at least 99.995% of microscopic particles 0.3 microns in size
- Pharmaceutical grade HEPA with silicone-gel seal & anodized aluminum frame
- Energy-efficient EC motorized impeller
- Sound Level @ 5 ft dBA 38 59
- Louvered front air inlet & optional top & rear exhaust outlets
- Purify the Air with built-in optional Germicidal UV bulbs (HC500FD-UV)





Modules utilize a bank of four UV lamps as a supplemental infection control measure.

UV800F UV MODULE



The UV800F is designed specifically for use with the HEPA-CARE[®] HC500FD and HC800FD portable units, mounting onto the top exhaust outlet. Air flowing through the UV800F is irradiated with germicidal UV (UV-C) energy.

- On/off switch so the portable unit can be run with or without UV-C
- Safety interlock switch protects against UV exposure

LAMP CHARACTERISTICS

UV425

C C L

Lamp Base	Four Pin w/T6 Ridge Base			
Bulb Length (mm)	400			
ARC (mm)	321			
Bulb Diameter (mm)	19			
Operating Current (mA)	780			
Lamp Voltage (V)	50			
Lamp Wattage (W)	39			



Output UVC Watts	10.2
Output µW/cm2 @ 1m	102
Rated Life (years)	1
% Output @ End of Life	80.00%

UV400C-PT & UV400C CEILING-MOUNTED UV MODULES

NYNYN Y



PART NO: UV400C-PT & UV400C

The UV400C-PT is designed specifically for irradiating exhaust air from any model. The UV400C is a module that can also be used in place of standard return-air grills in high infection risk areas.

- Mounts into a 2 ft. x 2 ft. drop ceiling grid
- Safety interlock shields protect against UV exposure



HEPA-CARE® Ceiling Filtration Systems

Ideal for rooms with inadequate floor space for a portable unit

HC800CD CEILING-MOUNTED MODEL



PART NO: HC800CD

The HC800CD is similarly equipped to the HC800FD. It can typically maintain 12+ ACH in rooms as large as 3,625 to 4,250 cubic feet, depending on the installation.

- Peak rated airflow 150cfm 925cfm, depending on the mode and the installation
- Equipped with an H14 Type (International Standard) HEPA filter, tested and certified to capture at least 99.995% of microscopic particles 0.3 microns in size
- Installs in a 2 ft x 4 ft ceiling grid
- Pharmaceutical grade HEPA with silicone-gel seal & anodized aluminum frame
- Easy, in-room access for filter changes (no need to disturb ceiling tiles) •
- Separate, wall-mounted control box can be mounted outside the room or remotely
- · Low-cost option to 'design & build' isolation rooms with dedicated HVAC systems

HC500CD CEILING-MOUNTED MODEL



PART NO: HC500CD

This compact model is designed for areas that don't require as much airflow as the HC800 series. It can typically maintain 12+ ACH in rooms 2,250 to 2,750 cubic feet, depending on the installation.

- Five motor speed settings, with peak output of 200cfm up to 550cfm*
- Equipped with an H14 Type (International Standard) HEPA filter, tested and certified to capture at least 99.995% of microscopic particles 0.3 microns in size
- Installs in a 2 ft x 2 ft drop ceiling grid
- Pharmaceutical grade HEPA with silicone-gel seal & anodized aluminum frame •
- Easy, in-room access for filter changes (no need to disturb ceiling tiles)
- Separate, wall-mounted control box can be mounted outside the room or remotely •
- Password protected to prevent tampering

Note: Use airflow ratings and air changes per hour (ACH) as a guideline only. Estimates are based on factory and independent testing @ 120 VAC with an air straightener and a traverse of readings taken with a computing vane-anemometer. Actual results may vary







М



Three Kits are Available to Fit Your Needs

HC101ACCK ISOLATION ROOM INSTALLATION KIT 1

HC101ACCK kit is for floor-to-window or 100% inside ceiling connection and contains:

- HC2235-08 Exhaust collar, 8"
- H2240-08 Quick-connect collar, 8"
- H2350-08 Locking clamp, 8", 2 ea.
- H2050-08-8-1 Semi-rigid metal flex duct, 8" x 8'





HC103ACCK ISOLATION ROOM INSTALLATION KIT 2

HC103ACCK kit is for 24" x 24" drop ceiling connection and contains:

- HC2424-08 Ceiling exhaust plate, 24" x 24"
- HC2235-08 Exhaust collar, 8"
- H2350-08 Locking clamp, 8", 2 ea.
- H2050-08-8-1 Semi-rigid metal flex duct, 8" x 8'

HC105ACCK ISOLATION ROOM INSTALLATION KIT 3

HC105ACCK kit is for 24" x 48" drop ceiling connection and contains:

- HC2448-08 Ceiling exhaust plate, 24" x 48"
- HC2235-08 Exhaust collar, 8"
- H2350-08 Locking clamp, 8", 2 ea.
- H2050-08-8-1 Semi-rigid metal flex duct, 8" x 8'





/ FILTER OR ACCESSORY	HC800FD	HC500FD	HC800CD	HC500CD	UV800F	UV400-PT	UV400C
STAGE 1:							
Anti-Microbial Pleated Prefilter	HC1802AM	HC1802AM	HC1802AM	HC1802AM	N/A	N/A	N/A
OPTIONAL PREFILTER:							
VAPOR-LOCK [®] Carbon Filter	HC1802CF	HC1802CF	HC1802CF	HC1802CF	N/A	N/A	N/A
FINAL STAGE:							
99.995% HEPA Filter	HC1836-H14	HC1818-H14	HC1836-H14	HC1818-H14	N/A	N/A	N/A
UVGI Lamp	N/A	N/A	N/A	N/A	UV425	UV425	UV425
Clear Heavy-Duty PVC Flex Duct, 8″ x 25′	H2030-08	H2030-08	N/A	N/A	N/A	N/A	N/A
Clear Wire Reinforced PVC Flex Duct, 8″ x 12′	H2030-08-12	H2030-08-12	N/A	N/A	N/A	N/A	N/A
Corrugated Aluminum Semi-Rigid Duct, 8″ x 8′	H2050-08-8-1	H2050-08-8-1	H2050-08-8-1	N/A	H2050-08-8-1	H2050-08-8-1	H2050-08-8-1
Quick-Connect Collar	H2240-08	H2240-08	H2240-08	H2240-08	N/A	N/A	N/A
Flex Duct Attachment Clamp	H2350-08	H2350-08	H2350-08	H2350-08	H2350-08	H2350-08	H2350-08



HEPA-CARE® **PRESSURE MONITORS**



PART NO: PPM3-S

The PPM3-S Portable Room&Pressure Monitor from6 \Abatement Technologies®wiis an essential tool forUpmeasuring the real-timebasepressure differentialPrbetween two adjacentareas within a facility.

FEATURES & BENEFITS

PORTABLE DIFFERENTIAL PRESSURE MONITOR

- User-friendly, color touch screen display
- Differential pressure measurement, ranges of -0.10inWC (-25 Pa) to +0.10inWC (+25 Pa)
- Archived logs are downloadable in CSV format to a USB flash drive
- Password protection feature (can be disabled)
- Visual & audible alarms with audio alarm delay & timed shutoff
- 6VDC @ 1 Amp output power supply/charger with 10' cable
- Up to 6 months of battery life operating in battery mode.
- Protective carrying case

SINGLE ROOM PRESSURE MONITOR



KITS AVAILABLE PART NO: RPM-RT1 OR RPM-RT2

Abatement Technologies® RPM Series Differential Pressure Monitors provide 24/7 monitoring and recording of differential air pressure relationships between multiple rooms or areas within a healthcare facility for patient isolation environments.

FEATURES & BENEFITS

- User-friendly, color touch screen display
- Differential pressure measurement, ranges of -0.10inWC (-25 Pa) to +0.10inWC (+25 Pa)
- Archived logs are downloadable in CSV format to a USB flash drive
- Password protection feature (can be disabled)
- Visual & audible alarms with audio alarm delay & timed shutoff features
- BACnet and N2 building automation system compatible
 Optional Temperature and Balative
- Optional Temperature and Relative Humidity (RPM-SENSOR)



SURGE CAPACITY ANTEROOM & CONTAINMENT MODULES

Infection control and reducing healthcare associated infections (HAI's) have become a central concern in hospital construction environments.

The AIRE GUARDIAN[®] Shield was originally designed to contain dust and contaminants during construction or renovation in healthcare facilities, however its usefulness has been demonstrated in many different use cases during the COVID-19 pandemic to create Triage Areas, Patient Waiting areas and to divide ICU rooms.

TEMPORARY, REUSABLE, ADAPTABLE MODULAR CONTAINMENT KIT

The MODULAR, ADAPTABLE **AIRE GUARDIAN° SHIELD**

is a new temporary containment barrier system that can be used to easily divide rooms, construct anterooms or install partitions anywhere with simple-to-connect panels and doors. Made from extruded aluminum and translucent, clear polycarbonate panels, or painted aluminum and galvanized steel; the system is adaptable and reusable. The AG Shield has a clean and professional appearance and offers unlimited configuration possibilities.


Customize the AG Shield to suit your requirements by selecting any combination of 4 different panel sizes, fixed or flexible corners and pre-hung door options; sliding or universal swing.

Deployable in a matter of minutes, the wall system can help convert any room into an isolation room or be used as an anteroom to allow passage between rooms while maintaining negative pressure differentials when combined with an Abatement Technologies[®] Portable Air Scrubber.





All AG Shield components are height adjustable from 7' to 10' 3" and doors are 80" tall. Ceiling attachment hardware fits standard, recessed and concealed ceiling tiles. Panels connect together at the bottom and top by inserting four finger brackets into the frame channel. Top and bottom gaskets ³/₈" thick create airtight seals.

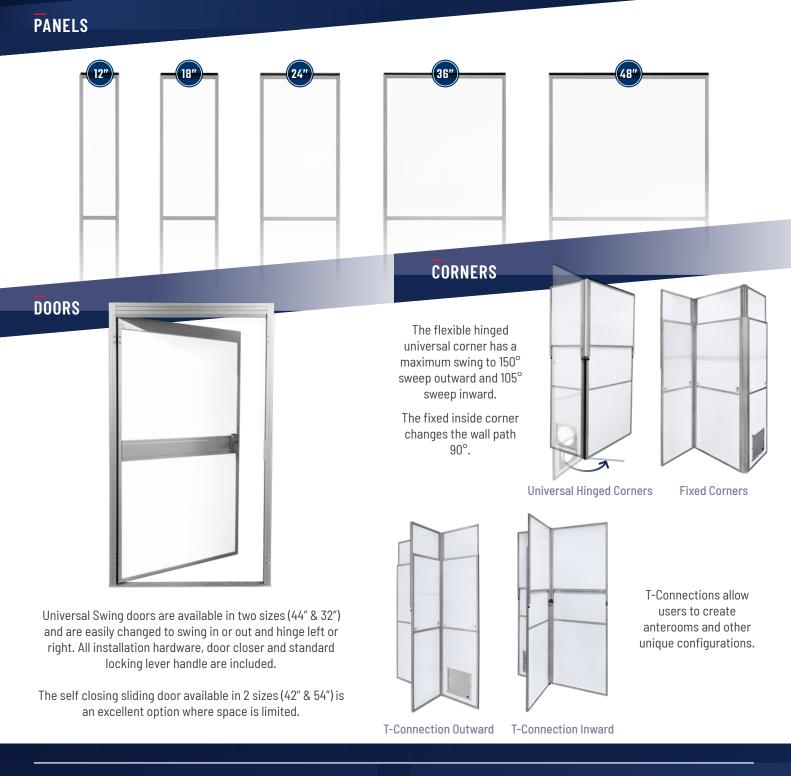



SURGE CAPACITY ANTEROOM & CONTAINMENT MODULES

ANTEROOM KITS - Customize an AIRE GUARDIAN® SHIELD Anteroom to meet your patient isolation requirements and meet ICRA Guidelines for temporary containment barrier walls.



Optional transport cart is available to purchase

CREATE A CUSTOM PACKAGE

Build a temporary wall system in minutes from any combination of simple-to-connect panels, doors, and corners.

The height of every panel, door and corner is adjustable from 7' to 10'3" and all AG Shield components are fully compatible with each other making it easy to adapt to different configurations. All installation hardware is shipped with the components.



DOOR

Universal Swing 32"

Universal Swing 44"

Sliding Door 42"

Sliding Door 54"

 \checkmark

1

AVAILABLE

TYPE

Clear

Classic

Speak with one of our Healthcare Consultants to design your fully customized anteroom package.

PANEL

12"

24″ or

24" w/ Exhaust

36"

48″

1

 \checkmark

CORNER

Fixed

Universal

ΤI

ТО

 \checkmark

1

This modular system has a clean and professional appearance, is reusable and can be negatively pressurized.

ISOQUAD® IQ810 ISOLATION TENT

The IO810 is a flexible and easy way to isolate patients preparing for surge capacity allowing one person set-up.

- Fits almost any bed or gurney •
- · Use with a HEPA filtration device to create negative pressure within the module
- Pulls in "clean air at the foot of the bed & exhausts HEPA filtered air behind the patient's head



PART NO- IO810

AIRE GUARDIAN® AG3100TMK TEMPORARY TRANSITION MODULE

The AG3100TMK includes an aluminum frame and a PVC enclosure. An optional transport cart can be purchased so the module can be quickly wheeled to a patient room, removed from the cart and sealed around the door frame.

- Enclosure flange fits any 46" 48" wide, 80" tall doorway
- · Large zippered doors at either end are wide enough for a gurney
- Large view windows
- Designed for use with a HEPA-CARE[®] in-room HEPA filtration unit
- Tough military tent fabric meets relevant fire/ life safety standards



PART NO: AG3100TMK

ANTE UP® HC7917 INFLATABLE ANTEROOM

The HC7917 can be mounted inside a patient room doorway or outside the door, entirely in the corridor.

- Inflates in minutes with a 110-volt compressor/ inflator included
- Fits any 46" 48" wide, 80" tall doorway & can be expanded for double doors
- Large zippered doors at either end are wide enough for a gurney
- Large windows with roll-up covers at each end
- Portable air scrubber & HEPA vacuum connection ports
- Tough fabric meets relevant fire/life safety standards



P∆RT NO+ HC7917



Abatement Technologies[®] developed the original portable air scrubber more than 20 years ago and our products continue to set the standard for quality, performance, portability, reliability and ease of use.

PREDATOR® 750 PORTABLE AIR SCRUBBER



PART NO: PRED750

- Airflow: Variable speed, rated up to 750cfm
- Six (6) air changes per hour (ACH) for 5,000 6,000 cubic foot spaces
- Weight: 35 pounds with filters
- Cabinet: Durable, Polyethylene Made From UL94HB Flame Retardant Resin
- Peak power draw: 1.9 amps or less, daisy chain up to 5 units per 15A circuit
- Optional pre-filter: 2" 500gsm or 150gsm VAPOR-LOCK[®] carbon filter (replaces standard stage 2 pre-filter)
- Ideal for use with AIRE GUARDIAN[®] 3000 Mobile Containment Cube (PN: AG3000MCCK)

PREDATOR® 1200 PORTABLE AIR SCRUBBER /

- Airflow: Variable speed, rated up to 900cfm
- Six (6) air changes per hour (ACH) for 6,000 9,000 cubic foot spaces
- Weight: 70 pounds with filters
- Cabinet: Durable, Polyethylene Made From UL94HB Flame Retardant Resin
- 3 units can be daisy-chained on one 15-amp circuit
- Optional pre-filter: 2" 500gsm or 150gsm VAPOR-LOCK[®] carbon filter (adds 4th filtration stage)
- · Built-in, two-wheel dolly and durable handle for maximum portability
- The PRED1200UV combines the bacteria-killing power of germicidal UV technology with the air-cleaning performance of HEPA filtration (PRED1200UV)



PART NO: PRED1200 / PAS1200UV



HEPA-AIRE® models feature tough, corrosion-resistant metal cabinets fabricated using airtight "zero bypass" rivet construction.

/ HEPA-AIRE® 750 PORTABLE AIR SCRUBBER

- Airflow: Variable speed, rated up to 750cfm
- Six (6) air changes per hour (ACH) for 2,000 7,500 cubic foot spaces
- Weight: 33.5 pounds with filters
- Cabinet: Anodized aluminum
- Optional pre-filter: 2" 500gsm or 150gsm VAPOR-LOCK[®] carbon filter (replaces standard stage 2 pre-filter)
- Peak power draw: 1.9 amps or less, daisy-chain up to 5 units per 15A circuit

/ **HEPA-AIRE® 1200** / PORTABLE AIR SCRUBBER

- Airflow: Variable speed, rated up to 900cfm
- Six (6) air changes per hour (ACH) for 3,000 9,000 cubic foot spaces
- Weight: 85 pounds with filters
- Cabinet: Stainless steel
- Optional pre-filter: 2" 500gsm or 150gsm VAPOR-LOCK[®] carbon filter (adds 4th filtration stage)
- 3 units can be daisy-chained on one 15-amp circuit
- Upright model, with non marking 8" rear wheels & front swivel casters
- The PAS1200UV combines the bacteria-killing power of germicidal UV technology with the air-cleaning performance of HEPA filtration
- Ideal for use with AIRE GUARDIAN[®] 3000 Mobile Containment Cube (PN: AG3000MCCK)

HEPA-AIRE® 1700 Portable Air Scrubber

- Maximum rated airflow up to 1650cfm
- Six (6) air changes per hour (ACH) for 19,000 cubic foot spaces
- Weight: 88 pounds with filters
- Anodized aluminum cabinet is lightweight and resistant to corrosion and scratching
- Optional pre-filter: 2" 500gsm or 150gsm VAPOR-LOCK[®] carbon filter (adds 4th filtration stage)
- Hour meter measures length of time during operation
- Upright model, with non marking 12" rear wheels & front swivel casters
- Easy-opening prefilter door swings down, HEPA Filter door swings up, both close with a secure cam latch and a gasket to protect against filter by-pass



PART NO: PAS750



PART NO: PAS1200 / PAS1200UV



PART NO: PAS1700



PAS2400 PORTABLE AIR SCRUBBER



- Airflow: Two speed, rated 700cfm (low)/ 2,100cfm (high), the highest performance 120V/15A air scrubber available
- Six (6) Air changes per hour (ACH) for 18,000 21,000 cubic foot spaces
- Weight: 170 pounds
- Cabinet: Stainless steel, with detachable top module

- Peak power draw: 12 amps or less
- Three standard filtration stages: 1" MERV 4 natural fiber filter, 2" MERV 8 pleated filter & HEPA filter
- Optional pre-filter: 2" 1.7lb carbon VAPOR-LOCK[®] filter (adds 4th filtration stage)
- Each pre-filter has its own shelf to minimize bypass

PART NO: PAS2400

PAS5000 PORTABLE AIR SCRUBBER

- Airflow: One speed, rated 4,000cfm, the highest performance air scrubber available
- Six (6) air changes per hour (ACH) for 35,000 40,000 cubic foot spaces
- Weight: 332 pounds
- Cabinet: Galvanized 20 gauge steel

- Peak power draw: 23 amps or less on a 230V/30A/60Hz electric supply
- Two standard filtration stages (2 of each filter required): 2" MERV 8 pleated pre-filters & HEPA filters
- Optional pre-filters (2 required): 2", 2.1lb carbon VAPOR-LOCK[®] filters (replace standard pre-filters)
- Pre-filters mount in door for protection against bypass

PART NO: PAS5000

ف

PREDATOR® & HEPA-AIRE® **REPLACEMENT FILTERS & ACCESSORIES CHART**

FILTER OR ACCESSORY	PRED750	PRED1200	PAS750	PAS1200	PAS1700	PAS2400	PAS5000
STAGE 1:							
Large Particle Filter	F621	F621	F621	F621	F621	F1821	H2001(2)
STAGE 2:							
MERV 8 Pleated Particle Filter	H502	H502	H502	H502	H502	H1902	H2002 (2)
FINAL STAGE:							
99.97% HEPA Filter	H161606-99	H610C-99	H161606-99	H610C-99	H1210C-99	H2418-99	H242406-99 (2)
Optional VAPOR-LOCK [®] Carbon	VL1002	VL1002	VL1002	VL1002	VL1002	VL2002	VL2024(2)
Hvy Duty Wire-Reinforced PVC	H2030-10	H2030-10	H2030-10	H2030-10	H2030-12	H2030-12	H2030-12
Black Wire-Reinforced Mylar, 25'	H2020-10	H2020-10	H2020-10	H2020-10	H2020-12	H2020-12	H2020-12
Lay Flat Outlet Ducting, 500' Roll	H2015-12	H2015-12	H2015-12	H2015-12	H2015-12	H2015-12	H2015-12
Flex Duct Attachment Clamp (Intake):	H2350-10	H2350-10	H2350-10	H2350-10	H2350-12	H2350-12	H2350-12(2)
Flex Duct Attachment Clamp (Exhaust):	H2350-10	H2350-10	H2350-10	H2350-10	H2350-12	H2350-12	H2350-14 (1)
Note: Only bold-faced items come with the base unit. All a	others must be purchas	ed separately.					

ABATEMENT TECHNOLOGIES: LEADERS IN CLEAN AIR



In addition to the trusted products we make and sell, we have partnered with some of the best brands to provide you with a more complete line of products to try and cover everything you do on site. Making Abatement Technologies[®] your single destination for quality equipment and supplies.

PERSONAL PROTECTIVE EQUIPMENT



HAND PROTECTION



RESPIRATORS AND FILTERS



DISPOSABLE DUST MASKS



DISPOSABLE PROTECTIVE CLOTHING

TOOLS AND ACCESSORIES



GRILL MASK AND DISPENSERS



STICKY FLOOR MATS



AIR SCRUBBER FILTERS



TAPES



DUCTING



CLAMPS



VACUUM DUST BAGS



HEPA FILTERS



CONSUMABLES & **PERSONAL PROTECTIVE EQUIPMENT**

